

EnergyAccess[®]

User's Manual

Version 2.3

**putting real-time energy
information at your fingertips**

a product of
Brayden Automation Corporation

Information in this manual is subject to change without notice. This manual (“Manual” or “Documentation”) and the software (“Software”) described in it are copyrighted, with all rights reserved. By using this Manual and accompanying Software, you, the end user, agree to the terms set forth in the License Agreement.

Copyright

Under the copyright laws, this Manual of the Software may not be copied, in whole or in part, without the express consent of Brayden Automation, Corp., (“Brayden Automation”) except in the normal use of the Software or to make a backup copy of the Software for your own use. The same proprietary and copyright notices must be affixed to any permitted copies as were affixed to the original. This exception does not allow copies to be made for others, whether or not sold, but all of the material purchased (with all backup copies) may be sold or given to another person. Under the law, copying includes translating into another language or format.

Federal copyright law also prohibits you from copying the written materials accompanying the Software without first obtaining our permission. You may not alter, modify or adapt the Software or Documentation. In addition, you may not translate, decompile, disassemble or reverse engineer the Software. You also may not create any derivative works based on this Software or Documentation. A derivative work is defined as a translation or other form in which the Software may be recast, transformed or adapted.

Limited Warranty on Media and Replacement

If you discover a physical defect in the Manual or in the media with which the Software is distributed, Brayden Automation will replace the media or Manual at no charge to you, provided you return the item to be replaced with proof of purchase to Brayden Automation or an authorized Brayden Automation dealer during the 60-day period after you purchased the Software.

All implied warranties on the media and Manuals, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to sixty (60) days from the date of original retail purchase of this product.

Even though Brayden Automation has tested the Software and reviewed the Documentation, **Brayden Automation makes no warranty or representation, either express or implied, with respect to the Software, its quality, performance, merchantability, or fitness for a particular purpose. As a result, this Software is sold “As is”, and you the purchaser are assuming the entire risk as to its quality and performance. In no event will Brayden Automation be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect in the Software or its Documentation, even if advised of the possibility of such damages.**

The Warranty and remedies set forth above are exclusive and in lieu of all others, oral or written, expressed or implied. No Brayden Automation dealer, agent, Qualified Installer, or employee is authorized to make any modification, extension, or addition to this warranty.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Trademarks

EnergyAccess and Energy Sentry are registered U.S. trademarks of Brayden Automation, Corp. The EnergyAccess logo is a trademark of Brayden Automation, Corp. Microsoft and Windows are registered trademarks of Microsoft Corporation in the USA and other countries. IBM is a registered trademark of International Business Machines.

© 1995-2010 Brayden Automation, Corp.

Brayden Automation Corp.
6230 Aviation Circle
Loveland, CO 80538
970-461-9600 FAX 970-461-9605
www.brayden.com
Email: support@brayden.com

Contents

Part 1 Getting Started	1
Chapter 1: Installing EnergyAccess	3
What You Need	3
Hardware	3
Installing EnergyAccess	3
Registering EnergyAccess	4
Where to Go From Here	4
Chapter 2: Using EnergyAccess	5
Starting the EnergyAccess Software	5
Exiting EnergyAccess	5
Using EnergyAccess's Windows	5
Resizing the Windows	5
Moving Between Fields	7
Using the EnergyAccess Status Bar	7
How to Get Help	9
Before You Call	9
How to Reach Brayden Automation Corporation	11
Chapter 3: Understanding the Demand Control Concept	13
What Is an Energy Rate?	13
What Is a Demand Rate?	13
What Is a Time-Of-Use (TOU) Demand Rate?	13
How Does the Energy Sentry Demand Controller Fit In?	14
What Does EnergyAccess Do?	15
Part 2 Putting EnergyAccess to Work	17
Chapter 4: Communicating with the Demand Controller	19
Establishing Communication with the Demand Controller or Monitor	19
Communicating with Multiple Demand Controllers or Monitors	22
Using a USB Port as a COM Port	22
Chapter 5: Editing Demand Controller Configurations	24
Printing a Demand Controller's Configuration	24

Modifying a Demand Controller's Configuration	25
Saving a Configuration to Disk.....	27
Editing a Configuration.....	27
Setting the Demand Limits	27
Items in the Demand Limit Window	29
Getting Your Load Priorities Straight	29
Changing the Minimum On/Off Times for Loads	31
The Demand Limits They are a Changin'	33
Disabling the Auto-Limit Option.....	36
Changing the Demand Limit Seasonally	36
Optimizing Your Savings.....	36
Overriding the Auto-Limit Demand Limit	37
Editing the Time-of-Day and Dates for On-Peak and Off-Peak periods	38
Items in the Time-of-Day Control of Demand Limit Window	39
Time-of-Day Control	39
Options.....	40
Editing the Dates for Holidays	40
Editing the System Settings	41
Items in the System Settings Window	42
Editing the Commercial Settings	43
Editing the Alarms	44
Items in the Edit Alarms Window	45
Editing Load Names	46
Chapter 6: What's Going On (and Off)?	48
Monitoring the Real-Time Status of the Demand Controller	48
Viewing Options	49
Items in the Status Window	50
Printing the Demand Controller's Status	51
Reviewing Demand Controller Events	51
Setting the Demand Controller's Demand Limit.....	52
Setting the Demand Controller's Clock.....	54
Items in the Set Clock Window	54
Resetting the Demand Controller's Peak Demand	55
Chapter 7: Logging the Demand Controller Data.....	56
Creating a Log File	56
Choosing the Appropriate Data Storage Technique	58
Gaps in the Log Data	61
Adding Data to an Existing Log File.....	62
Stopping the Logging Process	63

Viewing a Log File	63
Printing a Log File	64
Exporting a Log File	65
Chapter 8: Graphing	66
Graphing a Real-Time Load Profile.....	66
Graphing an Existing Log File	70
What Is On the Graph?	70
Understanding the Graph.....	71
Using the Graph Window's Controls.....	71
Positioning the Graph Cursor	71
Zooming In and Out around Data Points.....	72
Using the Graph Window's Scroll Bar	74
"View" Menu Options	75
Printing a Graph.....	77
 Glossary of Terms	 79
 Appendix A: Connecting Your Energy Sentry Demand Controller or Monitor	 85
 Index	 87

Part 1

Getting Started

Please take a few minutes to read the following three brief chapters on what you should know before you start using EnergyAccess.

Chapter 1, “Installing EnergyAccess,” gives you step-by-step instructions about how to install EnergyAccess.

Chapter 2, “Using Energy Access,” shows you how to use its windows, and get help.

Chapter 3, “Understanding the Demand Control Concept,” discusses how demand control works and relates to your electric bill.

Chapter 1: Installing EnergyAccess

This chapter tells you what you need to run EnergyAccess and how to install it.

What You Need

EnergyAccess requires the following hardware and software:

Hardware

- a PC with a 486 processor or higher
- at least 8 megabytes (8MB) of RAM (minimum)
- a hard disk with at least 10 megabyte (MB) of free disk space available
- a RS-232 serial or com port with a DB-9 sub-D connector or a USB port and compatible USB-to-Serial converter
- a Brayden Automation 9300 series Energy Sentry® Demand Controller or Monitor
- RS-232 interface cables (included with this software)

Note *Although EnergyAccess has been designed to work with the Energy Sentry demand controller or monitor, many functions, such as graphing an existing Log file, are available without connecting to a demand controller or monitor.*

Software


- Microsoft Windows NT, 2000, XP, or Windows 7 (32 bit) Operating System

Installing EnergyAccess

The following steps should be followed to successfully install EnergyAccess.

➔ To install EnergyAccess

- 1 Insert the EnergyAccess program disk into disk drive.
- 2 From the Program Manager's **File** menu, choose **Run**.

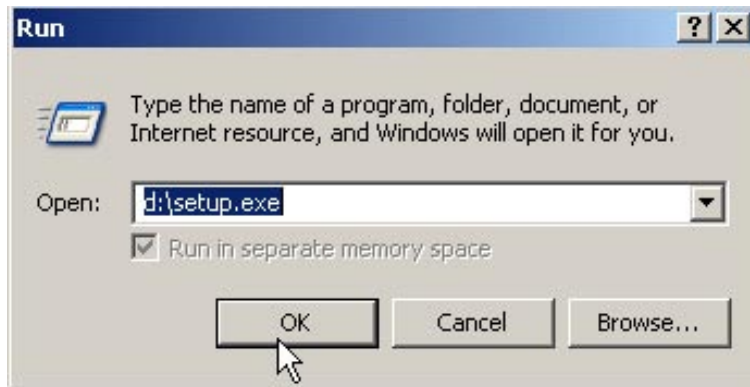

- 3 Type **d:\setup.exe** if you are installing from Drive D.
- 4 Click **OK**.
- 5 Follow the on-screen instructions.

Registering EnergyAccess

The first time you run EnergyAccess you will be asked to register it with Brayden Automation Corporation. You **MUST** register EnergyAccess before it is functional. Call (970) 461-9600 to register EnergyAccess. Ask for a registration number and password. You must present proof of purchase and the serial number of your demand controller or monitor. The registration number and password will only work for the current day and for one registration only. Therefore, do not call to register until you are actually ready to install it or you know the date you intend to install it. Make sure that you have already installed your demand controller or monitor and that it is connected to the computer and powered up. If you re-install EnergyAccess on a different computer, you will have to re-register.

Note *You must have administrator rights on the computer for proper installation.*

Where to Go From Here

- “Chapter 2: Using EnergyAccess” shows you how to start EnergyAccess, use its windows, and how to get help.
- “Chapter 3: Understanding the Demand Control Concept” teaches you the basics of how demand control works and how the Energy Sentry demand controller or monitor and EnergyAccess software work together to help you control your electrical demand.
- “Part 2 Putting EnergyAccess to Work” shows you how to immediately start putting EnergyAccess to work.

Chapter 2: Using EnergyAccess

Chapter 2 shows you how to start EnergyAccess. You will also find several tips about resizing a window, moving between fields, using the EnergyAccess status bar, and getting help.

Starting the EnergyAccess Software

The following steps show you how to start EnergyAccess.

➤ To start EnergyAccess

- 1 From the Windows Start Menu, select the EnergyAccess application icon, or
- 2 Start EnergyAccess by selecting its icon on the desktop.
- 3 Once EnergyAccess is running, the following menus appear across the top of your screen:



Exiting EnergyAccess

Exiting EnergyAccess automatically closes all open windows and stops communication with the demand controller.

➤ To exit or quit EnergyAccess

From the **File** menu, choose **Exit**. Choosing **Exit** automatically closes any open windows. To exit EnergyAccess, you can also double-click the EnergyAccess window's Control menu box or select the **Close** command from the Control menu.

Using EnergyAccess's Windows


This section shows you how to resize a window, move between fields, and use the EnergyAccess Status Bar.

Resizing the Windows


Certain windows, such as the Graph window, benefit from expanding by providing you with more information.

☞ To resize a window

- 1 Move the mouse pointer over the border of the window until it changes to a resizing pointer.

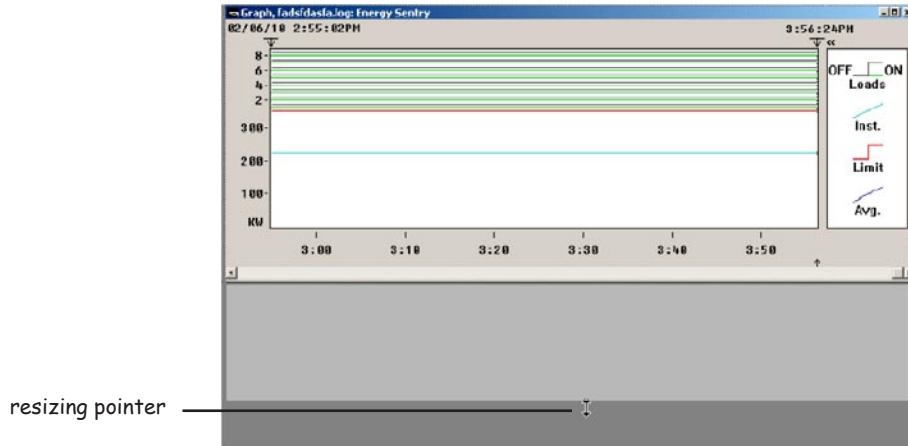

- 2 Drag (while holding down your mouse button, move your mouse) the border horizontally or vertically to expand or reduce the size of the window.

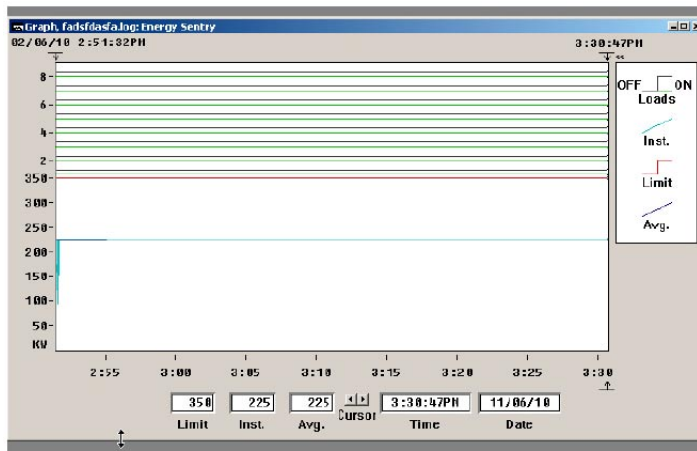

You can also click the window's Maximize button to expand the window to its full size.

Moving Between Fields

You can enter information in any order you like by clicking in each field's edit box. For example, the **Time-Of-Day Control of Demand Limit** window contains many edit boxes:

	Start Date	Time 1		Time 2	
		On-Peak	Off-Peak	On-Peak	Off-Peak
Summer	4/1	8:55 AM	10:05 PM	12:00 AM	12:00 AM
Winter	10/1	5:55 AM	1:05 PM	11:55 AM	9:05 PM
Fall					
Spring					

Number of Seasons: 2

Options:

- Weekends On-Peak
- Automatically adjust clock for daylight savings changes
 - Prior to 2007
 - Year 2007 and after

To move the cursor (a flashing vertical bar) from **Start Date** to **On-Peak**, you could click in **On-Peak**'s edit box. However, often the quickest way to move the cursor to another field is to press the following keys on your keyboard:

Keystroke

tab

shift+tab

(Hold down the shift key and press tab)


Result

Next field or control

Previous field or control

Using the EnergyAccess Status Bar

The status bar is a horizontal bar at the bottom of the EnergyAccess window:

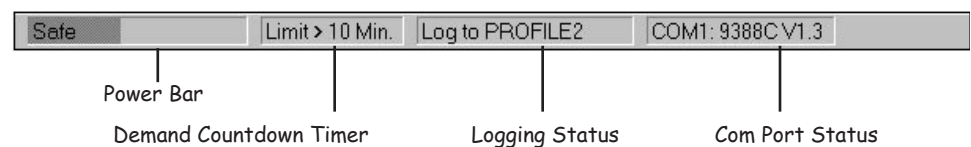

The status bar displays information about the risk of exceeding the Demand Limit, the time until the Demand Limit will be reached, whether or not the demand controller's data is being saved to a file, which communications port is being used, and the demand controller's model

and firmware version number.

The **Power Bar** portion displays one the following conditions and corresponding colors:

Color	Message	Meaning
Green	Safe	If the present conditions continue, the average demand will not exceed the demand limit.
Yellow	Caution	If the present conditions continue, the average demand may exceed the demand limit, but the demand controller will probably be able to maintain the average below the limit.
Red	WARNING	If the present conditions continue, the demand controller will not be able to prevent the average from exceeding the limit.

The **Power Bar** integrates many pieces of information, including the instantaneous demand, average demand, demand limit, and the on/off status of loads. EnergyAccess gives each piece of data a different weight and then combines the information using a proprietary algorithm to give you a quick and easy way to determine if the average demand might exceed the demand limit.


The **Power Bar** is updated once per second, which gives you a “real-time” feel for the current demand control situation.

The **Demand Countdown Timer** displays the minutes and seconds until the average demand will reach the demand limit (if the instantaneous demand remains the same). For a fifteen minute averaging period, the display is updated every eight seconds. The time is shown to the nearest ten seconds to make it easier to read.

To calculate the time until the average demand reaches the demand limit, EnergyAccess reads how much power was used over the last sixteen seconds and assumes that the power will be used at the same level from now on. If the instantaneous demand remains the same, the average demand will reach the demand limit in the time shown.

The **Logging Status** shows whether the demand controller’s data is being saved to a Log file.

The **Com Port Status** shows which of your PC’s serial communications ports is being used by the demand controller, the controller’s model number, and the controller’s firmware version number.

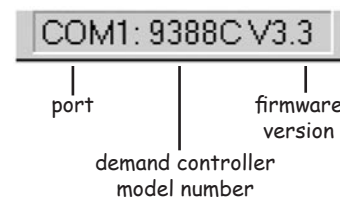

Com?: indicates that a communications port has not been selected.

Com1: ???V?? indicates that either the controller or monitor is turned off or that you have a problem with the RS232C cable.

Using the Power Bar and Demand Countdown Timer Together

The **Power Bar** and **Demand Countdown Timer** use completely independent sources of information. Neither one uses the results of the other in its calculations, so you can look at two independent pieces of information and decide for yourself whether or not you need to take any action.

Since the **Power Bar** is updated once per second, it provides a display that changes more quickly than the **Demand Countdown Timer** and it is more easily affected by short power fluctuations, such as motor turn-on currents. The **Demand Countdown Timer** provides more of a long-term indicator of electrical usage.

If the **Power Bar** displays the “WARNING” message, then some action may need to be taken to avoid exceeding the demand limit. Occasional, short bursts of “WARNING” do not necessarily indicate a problem.

How to Get Help

Only registered users of version 2.x can receive technical support. When you installed EnergyAccess Version 2.x you registered it. Please have your registration of your copy of EnergyAccess and the serial # of your demand controller or monitor available when you call.

Before You Call


If you have a question, you probably want to get it answered right away. But before you call, try the following:

Try The On-Screen Help

EnergyAccess provides on-screen help that describes fields and commands and guides you through the various procedures within the program.

Whenever you press the **F1** function key on your keyboard, a Help window opens providing you with information about the active window in EnergyAccess.

You can also choose **Contents** from the **Help** menu. The Contents shows a table of contents for EnergyAccess's Help system:

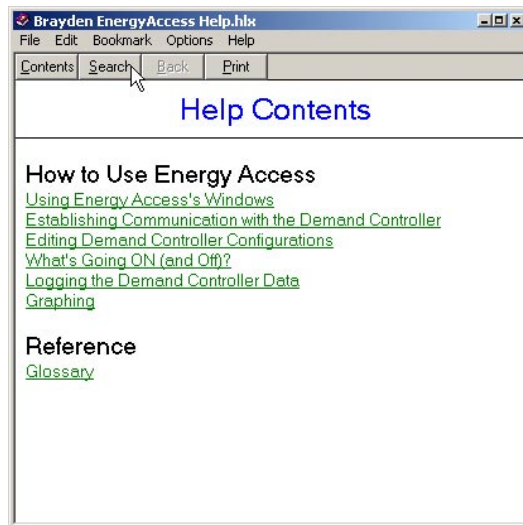

Selecting an item in the Contents immediately opens the relevant Help topic.

For details about how to use Help once it is open, choose **How to Use Help** from the **Help** menu.

Read The Manual

Most users want to start using a program without reading the manual. However, if you have any questions about how to use EnergyAccess, please read the relevant sections in the manual before calling us. Try looking in the table of contents and the index.

Know Your Number

When you call for technical support, you will be asked for your registration and serial numbers. You will find these on the inside front cover of this manual or in Help - About EnergyAccess.


Have EnergyAccess Running

By having EnergyAccess running on your computer, you can more easily describe your problem and follow directions.

If you are calling about an on-screen message, please have the message in front of you on your screen or write it down in detail.

Know Your Version Number

You can find the EnergyAccess version number on the **About EnergyAccess** dialog under the **Help** menu:

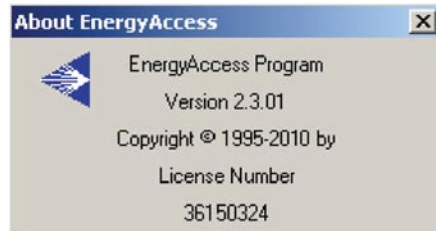

How to Reach Brayden Automation Corporation

You can reach us in the following ways:

- Telephone technical support is available between 8 a.m - 12 noon and 1 p.m - 5 p.m (MT), Monday through Friday:

Phone support: **(970) 461-9600**

- You can fax us questions or comments at any time:

Fax registration and support: **(970) 461-9605**

- You can E-mail us: **support@brayden.com**

- And you can write us:

Brayden Automation Corp.
Attn: Technical Support
6230 Aviation Circle
Loveland, CO 80538

Chapter 3: Understanding the Demand Control Concept

What Is an Energy Rate?

An Energy rate bills you for electrical use according to the total energy used per month (total kilowatt-hour use), regardless of how or when you use this energy. Since demand peaks do not affect Energy rate billing, the Energy Sentry system does not offer you any benefits under an Energy rate.

What Is a Demand Rate?

Unlike an Energy rate, a Demand rate charges you not only for total energy use, but how fast it is used.

When you use a lot of energy in a short amount of time, you create a high peak demand, which is the highest demand that has occurred during any one averaging period during the billing period. For example, when office equipment, lighting and heating/cooling systems are turned on in the morning, this might create a higher demand than during the evening. A peak demand can occur anytime during the month.

Even though you might not have high electrical demands continuously throughout your business day, your utility company uses your single highest peak demand that has occurred during the billing period to compute your electric bill. If you can control your maximum usage in any and all demand intervals, you can significantly lower your monthly electric bills.

What Is a Time-Of-Use (TOU) Demand Rate?

Under the Time-Of-Use (TOU) Demand rate, the electric utility determines when it costs the most for the electricity that it supplies. It then passes the extra cost along to its customers by charging more for the electricity during those times. The time when electricity costs more is called “On-Peak.” The time when electricity costs less is called “Off-Peak.” The Off-Peak times could be certain periods during the day or specific days. For example, some utilities have weekend days Off-Peak while other utilities have holidays as Off-Peak times. Still other utilities break each day into multiple On-Peak time periods and Off-Peak time periods.

The major advantage of a TOU rate is that the cost of electricity (when controlled) to the customer during the Off-Peak time is usually much less than the cost that the utility charges to its non-TOU customers. If a customer can control the expensive On-Peak electricity, significant cost savings can be achieved.


Under the Time-Of-Use (TOU) Demand rate, you pay for both total energy used and for your highest average peak energy usage during the On-Peak time over the billing period (highest average KW demand). The On-Peak time is the period as defined by a TOU electric rate during which energy demand is the greatest and the utility is at or near its system peak.

When compared to the Energy Rate, the TOU Demand rate offers a much lower charge for total KWh used. However, since a utility recovers some of the cost of its capital assets and operating costs through a demand charge for the highest average peak energy usage during the billing period, the savings could be offset if the demand peak is too high.

By controlling the peak demand during the On-Peak time, the demand charge is reduced.

How Does the Energy Sentry Demand Controller Fit In?

The Brayden Automation Energy Sentry Demand Controller gives you automatic control over your electrical demand. It measures the total demand—the speed at which you use energy—throughout your entire office, business, church or other commercial or industrial facility. After you or your installer has determined your energy usage pattern, you set the demand limit within the Energy Sentry demand controller. As your electrical demand approaches the demand limit, the Energy Sentry demand controller shuts off pre-determined, non-essential, electrical loads, one at a time as needed, for a short time, to prevent your demand level from exceeding the demand limit. The Energy Sentry Demand Controller offers effective demand control for both Demand and TOU-demand rates.

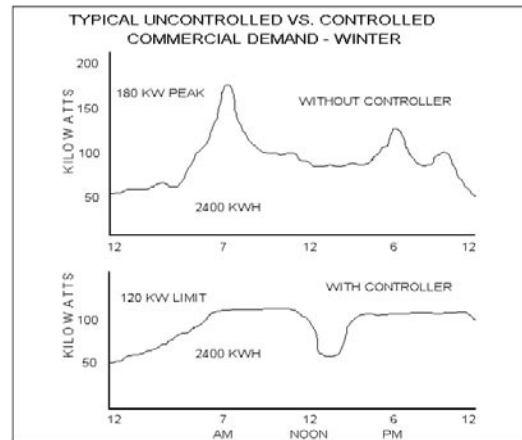

What Does EnergyAccess Do?

EnergyAccess gives you a convenient way to program the demand controller. With it, you can set the demand controller's demand limit, load priorities, minimum on and off times for loads, and more.

But EnergyAccess does more than merely set parameters within the demand controller. It also gives you the ability to log energy use pattern data to a Log file, graph a stored Log file, and graph your load profile real-time. Load profile graphs can be printed out from the Log files allowing you to view daily load profile graphs and understand your energy use patterns. In addition, pop-up alarms are programmable on your PC and can assist you in better management of your energy use.

As you can see, if you operate under a Demand or Demand-TOU rate, the Energy Sentry demand controller and EnergyAccess software offer you a powerful way to reduce your electrical demand and therefore reduce your electric bills.

Part 2

Putting EnergyAccess to Work

Part 2 shows you how to start putting EnergyAccess to work monitoring and controlling your electrical demand:

Chapter 4, “Communicating with the Demand Controller,” shows you how to establish communication with the demand controller or monitor and how to change communication ports.

Chapter 5, “Editing Demand Controller Configurations,” explains how to effectively set up the demand controller through the EnergyAccess software.

Chapter 6, “What’s Going On (and Off)?,” discusses how to monitor the status of the demand controller or monitor, and set the controller’s demand limit, clock, and peak demand.

Chapter 7, “Logging the Demand Controller Data,” shows you how to create, view, and print a log file.

Chapter 8, “Graphing,” explains how to graph a load profile from real-time or existing data and how to use the Graph window’s controls.

Chapter 4: Communicating with the Demand Controller

Chapter 4 shows you how to use EnergyAccess to establish communication with the demand controller.

Establishing Communication with the Demand Controller or Monitor

Many tasks can be accomplished without communicating with the demand controller. You can view a Log file, edit a configuration file, and edit load names and alarms. However, other tasks, such as real-time graphing, require that the demand controller be connected to one of your PC's serial communication ports.

When you start EnergyAccess, it attempts to establish communication with a demand controller or monitor through one of your PC's serial communication ports. If only one communications port is available for use, EnergyAccess determines if a demand controller is connected to it. If multiple communications ports are available, EnergyAccess gives you the opportunity to select a communications port at the appropriate time after it is running.

 
➤ To establish communication with the demand controller

- 1 In the Start Menu, open the Energy Access program group that contains the EnergyAccess application icon.
- 2 Start EnergyAccess by selecting its application icon.

Once EnergyAccess is running, the following menus appear across the top of your screen:




If EnergyAccess has established communication with the demand controller, the Com Port Status portion of the status bar looks like the following:



If a serial port has not yet been selected, the Com Port Status portion of the status bar looks like the following:

A screenshot of a status bar showing the text "COM?" in a grey box.

 If you see the following message on the Com Port portion of the Status bar, the demand controller might be turned off or you might have a problem with the cable that connects the controller or monitor to your PC:


A screenshot of a status bar showing the text "COM1: ???? V??.?" in a grey box.

Make sure that the RS232C cable is properly connected to the appropriate serial port on your PC and the demand controller is turned on.

- 3 If communication with the demand controller or monitor has not yet been established, choose one of the following commands:
 - **Upload Configuration** (**File** and **Controller** menus)
 - **Real Time Status** (**Controller** menu)
 - **Real Time Graph** (**Controller** and **Graph** menus)
 - **Events** (**Controller** menu)
 - **Set Demand Limit** (**Controller** menu)
 - **Set Clock** (**Controller** menu)
 - **Reset Peak** (**Controller** menu)
 - **Record Data to Log File** (**Logging** menu)

Which command you select depends on your purpose for establishing communication with the demand controller or monitor. In other words, if you attempt to access a function which requires communication with the demand controller and communication has not yet been established, EnergyAccess asks you to select a communications port.

After selecting one of the commands, EnergyAccess asks you to select a communications port if multiple communications ports are available.

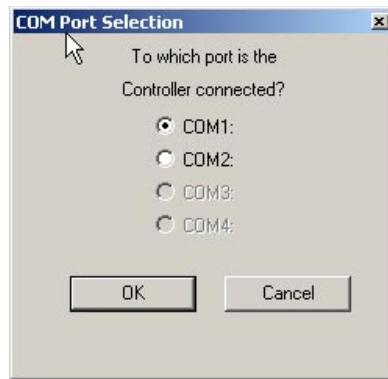


- 4 Select the communications port that is used by the demand controller.
- 5 Click **OK**

The following window appears as EnergyAccess attempts to establish communication with the demand controller:



After a few moments, the Status window for the controller appears:

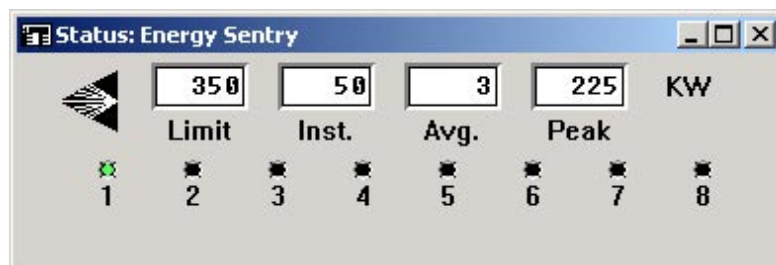

For details about the Status window, see “Monitoring the Real-Time Status of the Demand Controller” on page 48.

The **Com Port Status** portion of the status bar shows which com port is being used, the controller’s model number, and the controller’s firmware version number.

For details about each component of EnergyAccess’s status bar, see “Using the EnergyAccess Status Bar” on page 7.

Communicating with Multiple Demand Controllers or Monitors

EnergyAccess can be used to communicate with more than one demand controller or monitor simultaneously. To do this requires multiple serial ports and instances of EnergyAccess running at the same time, one for each controller or monitor connected to the computer. Up to four instances of EnergyAccess can be running at the same time. Each instance uses one of the computer's COM ports.

Using a USB Port as a COM Port

It is also possible to communicate with the demand controller using the computer's USB Port. Use Brayden Automation's USB to Serial convertor (P/N: 0715-0002) or a comparable USB to Serial adapter. (May be purchase separately.)

Note: Not all USB to Serial adapters work with all operating systems. Make sure your adapter will work with the version of windows that you have installed on the computer running Energy Access.

➤ Installing the USB Driver

- 1 Follow the directions on the package

Once the USB driver has been installed it mimics a COM Port and thus shows up to Energy Access as one of the four COM Ports in the COM Port selection dialog box.

Chapter 5: *Editing Demand Controller Configurations*

A demand controller's configuration is made up of many components, including the following:

- The demand controller's or monitor's name

Every demand controller should have a unique name, which is kept in the controller as part of its configuration. The controller's name appears at the top of each window and is important when EnergyAccess communicates with multiple demand controllers.

- On-Peak and Off-Peak limits and times
- Load priorities
- Minimum on/off times for controlled loads
- Holiday settings

A demand controller's configuration is actually stored in non-volatile memory in the demand controller itself.

Note *Although not strictly stored on the demand controller, load names and alarm settings are associated with specific demand controllers and appear on the Configuration window. You can modify these settings without uploading the demand controller's configuration.*


Since your demand controller's configuration was set up when your demand controller was installed, you can immediately start putting the Energy Sentry system to work.

Printing a Demand Controller's Configuration

You might want to print the demand controller's configuration before making changes to it, so you can obtain an overall report of how the demand controller is set up.

➤ To print a demand controller's configuration

- 1 From either the **File** or **Controller** menu, choose **Upload Configuration**.
- 2 From the **File** menu, choose **Print**.

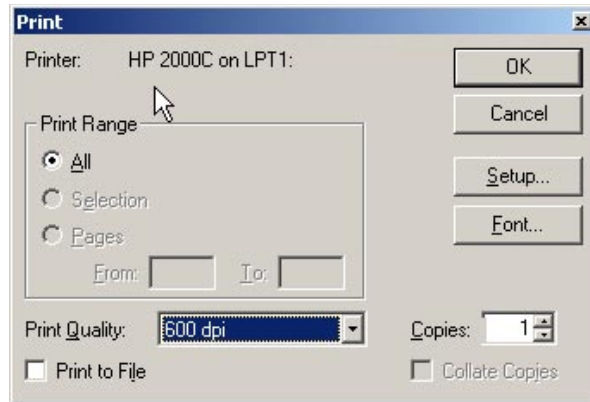

- 3 Select the desired printing options.

The available print options depend on the selected printer driver.

- 4 Click **OK**.

Modifying a Demand Controller's Configuration

Although your demand controller's configuration should have already been set up by your installer, you may find that you need change a system setting to optimize your configuration for your electrical usage. Common changes made are:

- Increase or decrease the controller's On-Peak or Off-Peak limits.
- Adjust load priorities.
- Modify the minimum on and off times for controlled loads

In addition, any other system parameter can be modified.

➔ **To modify a demand controller's configuration**

- 1 From either the **File** or **Controller** menu, choose **Upload Configuration**.

The screenshot shows a software window titled "Config.COM1: Energy Sentry". It contains several configuration sections:

- Demand Limits:** On-Peak Demand Limit 350 KW, Off-Peak Demand Limit OFF
- Exceeding Demand Limit Alarm:** Audio Alarm No, Window Pop-Up Alarm No. Sound Alarm When: Average At or Above Limit.
- Approaching Demand Limit Alarm:** Audio Alarm No, Window Pop-Up Alarm No. Sound Alarm When: (empty box).
- Load Information:** A table with columns: Load Name, Priority, Minimum On Time, Minimum Off Time.

Load Name	Priority	Minimum On Time	Minimum Off Time
Load #1.....	1	0	0
Load #2.....	2	0	0
Load #3.....	2	0	0
Load #4.....	4	0	0

- 2 Once the configuration has finished uploading to your computer, edit the configuration.

For details, see “Editing a Configuration” on page 24.

- 3 From the **File** menu, choose **Download Configuration**.

➔ **To edit a configuration stored on your hard disk**

- 1 From the **File** menu, choose **Open Configuration File**.

- 2 Edit the configuration.

For details, see “Editing a Configuration” on page 24.

- 3 From the **File** menu, choose **Save Configuration File** and click **Save**.

- 4 To immediately update the demand controller or monitor, choose **Download Configuration** from the **File** menu.

Saving a Configuration to Disk

There are two advantages to saving a configuration on your hard disk.

- You can quickly restore a controller's settings to the correct values.

Suppose, for example, you suspect that the demand controller's setting may have been accidentally changed, either through EnergyAccess or by direct manipulation of the demand controller's knob. If you have saved the demand controller's configuration to disk, you can restore the controller's settings by opening the configuration file and downloading it to the controller.

- You can quickly set up multiple controller configurations, which are similar by starting with the configuration file.

➤ To save a configuration to disk

Once you have edited a configuration, choose **Save Configuration** from the **File** menu. Please note that saving a configuration file to disk does not automatically download it to the demand controller.

Editing a Configuration

You can change any part of a controller's configuration. However, the following parameters are set when your controller or monitor was installed and should not need to be changed assuming they are correct for your application:

- Number of Loads
- Power Measurement
- Full Scale
- Demand Averaging Period
- Pulse Constant
- Minimum Off Time for loads

Many settings significantly affect how the controller goes about the business of controlling your energy demand. For example, changing the On-Peak Demand Limit can drastically affect your energy bill.

Setting the Demand Limits

You can set both On-Peak and Off-Peak demand limits for TOU control or just the On-Peak demand limit for a non-time-of-use Demand rate.

Tip You can have EnergyAccess automatically change the On-Peak demand limit on a monthly, quarterly, or seasonal basis. For details, see “The Demand Limits They are a Changin’” on page 33.

Demand limits look like this on the Configuration window:


Demand Limits	
On-Peak Demand Limit	16.0 KW
Off-Peak Demand Limit	OFF

➤ To set the demand limits

- 1 Make the **Configuration** window active.

To open the **Configuration** window, choose **Upload Configuration** from the **File** or **Controller** menu.

- 2 From the **Edit** menu, choose **Demand Limits**.

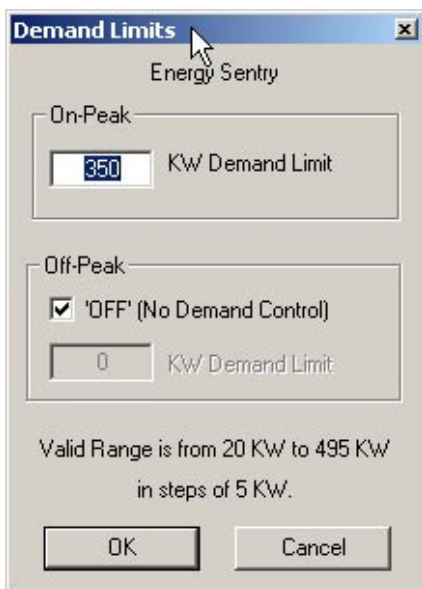

Tip You can double-click the appropriate value shown on the **Configuration** window to open the editing window.

- 3 Edit the **On-Peak KW Demand Limit**.

Important Editing the **On-Peak Demand KW Limit** can significantly affect your energy bill. Do so with care.

- 4 If necessary, enable the **Off-Peak KW Demand Limit** by unchecking the **Off** check box.

5 Edit the **Off-Peak KW Demand Limit**.

6 Click **OK**.

Items in the Demand Limit Window

On-Peak Options

KW Demand Limit: As the average demand approaches the value you enter, the Energy Sentry demand controller begins shutting off pre-determined loads to control energy demand during the On-Peak periods.

Off-Peak Options



Off Checked: Check **Off** to prevent the demand controller from controlling loads during off-peak times.



Off Unchecked: While **Off** is unchecked, you must enter a value for the Off-Peak KW Demand Limit. The Energy Sentry demand controller uses the value entered in the edit box to control energy demand during the Off-Peak period.

Getting Your Load Priorities Straight

This section applies only to demand controllers. If EnergyAccess is connected to a demand monitor, disregard this section.

A priority is the relative importance of each controlled load to all other controlled loads, as assigned in the demand controller. As the average demand approaches the Demand Limit, the demand controller uses the priority of each load to determine which loads to shut off (shed) first.

A load with a priority of “1” is the highest priority and is shed last and restored first. A load with a priority of “16” is the lowest priority and is shed first and restored last. A load with a priority of “17” is shut off continuously during on-peak periods and restored only during Off-Peak periods. Loads of equal priority will rotate being shed and restored.

Load priorities look like this on the **Configuration** window:

Load Information			
Load Name	Priority	Minimum On Time	Minimum Off Time
AC 1st Floor Conference Room.....	2	8	5
Base Board Heat 1st Flr. Con.....	2	0	0
1st Floor Exhaust Fan.....	2	0	0
Basement Heat Pump.....	1	8	5
AC 2nd Floor Conference Room.....	2	0	0
Base Board Heat 2nd Flr. Conf.....	2	0	0
2nd Floor Exhaust Fan.....	3	0	0
AC Reseach and Development.....	2	8	5

As your electrical demand approaches the demand limit, the Energy Sentry demand controller sheds the “2nd Floor Exhaust Fan” first because it has a load priority of 3, which, in this example, is the lowest load priority.

If your electrical demand continues to approach the demand limit, Energy Sentry begins shedding loads with a priority of 2. Loads with equal priority take turns being shed first.

Finally, if your electrical demand still continues to approach the demand limit, Energy Sentry begins shedding loads with a priority of 1. In this example, the “Basement Heat Pump” has a load priority of 1, so it is the last load to be shed.


After your electrical demand is reduced, Energy Sentry begins restoring the loads in the reverse order that they were shed. So the first load to be restored is the “Basement Heat Pump” because it has a load priority of 1. Next, loads with priorities of 2 are restored. Finally the “2nd Floor Exhaust Fan” load is restored.

➤ To edit a load priority

- 1 Make the **Configuration** window active.

To open the **Configuration** window, choose **Upload Configuration** from the **File** or **Controller** menu.

- 2 Double click on one of the entries of the priority column in the load information section of the configuration window.

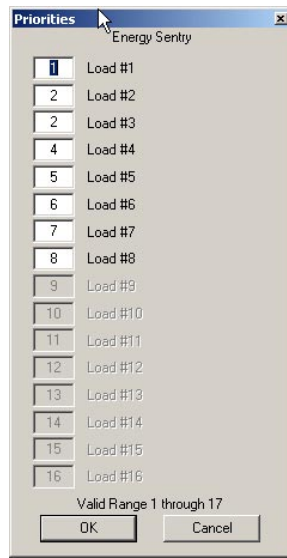

Tip You can double-click the appropriate value shown on the Configuration window to open the editing window.

- 3 Edit the desired load priority or priorities.
- 4 After you have finished editing the load priorities, click **OK**.
- 5 After you have finished editing the configuration, choose **Download Configuration** from the **File** menu.

Changing the Minimum On/Off Times for Loads

This section applies to Demand Controllers only.

Resistive loads, such as a hot water heater or baseboard electric heat, do not usually require Minimum On Times, which should only be used on inductive loads, such as a heat pump or air conditioning compressor, and should be as short as possible. Use of Minimum On and Off Times restrict the Demand Controller's ability to control demand and should only be used when necessary. Use of Minimum On Times may cause the average demand to exceed the set point of the Demand Controller.

Important *The Minimum Off Time setting should only be set by a qualified installer.*

The Minimum On and Off Times look like this on the **Configuration** window:

Load Information			
Load Name	Priority	Minimum On Time	Minimum Off Time
AC 1st Floor Conference Room.....	2	8	5
Base Board Heat 1st Flr. Con.....	2	0	0
1st Floor Exhaust Fan.....	2	0	0
Basement Heat Pump.....	1	8	5
AC 2nd Floor Conference Room.....	2	0	0
Base Board Heat 2nd Flr. Conf.....	2	0	0
2nd Floor Exhaust Fan.....	3	0	0
AC Reseach and Development.....	2	8	5

In the example, the “AC 1st Floor Conference Room” has a Minimum On Time of eight minutes, that is it must stay on for at least eight minutes when restored by the demand controller.

➤ To change a load's Minimum On/Off Time

- 1 Make the **Configuration** window active.

To open the **Configuration** window, choose **Upload Configuration** from the **File** or **Controller** menu.

- 2 Double click on one of the entries of the Minimum On Time/Minimum Off Time in the load information of the configuration window.

ON	OFF	
0	0	Load #1
0	0	Load #2
0	0	Load #3
0	0	Load #4
0	0	Load #5
0	0	Load #6
0	0	Load #7
0	0	Load #8
0	0	Load #9
0	0	Load #10
0	0	Load #11
0	0	Load #12
0	0	Load #13
0	0	Load #14
0	0	Load #15
0	0	Load #16

Valid Range 0 through 20 Minutes

OK Cancel

Tip You can double-click the appropriate value shown on the Configuration window to open the editing window.

- 3 Edit the desired ON or OFF times.
- 4 After you have finished editing the minimum on/off times for loads,
- 5 click **OK**.
- 6 After you have finished editing the configuration, choose **Download Configuration** from the **File** menu.

The Demand Limits They are a Changin'

You may find that you need to periodically change the controller's On-Peak demand limit due to seasonal changes or differing electrical demands each month. You could, of course, use the techniques described in "Setting the Demand Controller's Demand Limit" on page 52 to manually change the demand limit. Or you could let EnergyAccess do the work for you.

With the Auto-Limit option enabled, EnergyAccess uses up to twelve Change Dates and demand limits to automatically change the On-Peak demand limit on a monthly, quarterly, or seasonal basis. Until you enable the Auto-Limit option on the **Configuration** window, the controller continues to use the demand limit that you set up using the **Set Demand Limit** window under the Controller menu or with the **Demand Limit** portion of the **Configuration** window.

The Auto-Limit option look like this on the **Configuration** window:

Automatic Demand Limit Changes								
	Change Date	Demand Limit(KW)		Change Date	Demand Limit(KW)		Change Date	Demand Limit(KW)
#1	0/0	6.0	#5	0/0	6.0	#9	0/0	6.0
#2	0/0	6.0	#6	0/0	6.0	#10	0/0	6.0
#3	0/0	6.0	#7	0/0	6.0	#11	0/0	6.0
#4	0/0	6.0	#8	0/0	6.0	#12	0/0	6.0
Number of Days Offset		5						

Each Change Date and Demand Limit are a “setting pair.” You can use up to 12 setting pairs. You may use all, some, one, or none of these Change Dates and demand limits depending on your particular needs. If you later decide that you prefer to use only one demand limit, you can easily disable the Auto-Limit option.

In addition to the twelve setting pairs, there is one additional setting called **Number of Days Offset**. This “fudge factor” is necessary since the meter reader may or may not read your meter on the scheduled date. Five or six days usually allows enough time for the variation. If the demand limit increases from one **Change Date** to the next, the demand limit changes on the date that equals the **Change Date** plus the number of days entered for **Number of Days Offset**. If the demand limit decreases from one **Change Date** to the next, the demand limit changes on the date that equals the **Change Date** minus the number of days entered for **Number of Days Offset**.

Suppose, for example, you live in a part of the country where the weather gets quite hot in the summer, so your building’s air conditioners add significantly to your overall electrical demand. You could set up the Change Dates and demand limits like the following:

Automatic Demand Limit Changes								
	Change Date	Demand Limit(KW)		Change Date	Demand Limit(KW)		Change Date	Demand Limit(KW)
#1	1/15	6.0	#5	5/15	6.0	#9	9/15	12.0
#2	2/15	6.0	#6	6/15	12.0	#10	10/15	6.0
#3	3/15	6.0	#7	7/15	14.0	#11	11/5	6.0
#4	4/15	6.0	#8	8/15	14.0	#12	12/5	6.0
Number of Days Offset		5						

Notice that the **Number of Days Offset** is set to 5. Since the demand limit increases from date #5 to date #6, the demand limit increases from 6 KW to 12 KW on June 20th (6/15 plus 5 days). On September 10th (9/15 minus 5 days), the demand limit decreases from 14 KW to 12 KW.

➔ To edit the Auto-Limit Change Dates and Demand Limits

- 1 Make the **Configuration** window active.

To open the **Configuration** window, choose **Upload Configuration** from the **File** or **Controller** menu.

- 2 From the **Edit** menu, choose **Auto Limits**.

	Change Date	Demand Limit (KW)		Change Date	Demand Limit (KW)
#1	0/0	60	#7	0/0	60
#2	0/0	60	#8	0/0	60
#3	0/0	60	#9	0/0	60
#4	0/0	60	#10	0/0	60
#5	0/0	60	#11	0/0	60
#6	0/0	60	#12	0/0	60

Valid Range is from 20 KW to 495 KW
in steps of 5 KW.

5 Number of Days Offset
Valid Offset Range is 1 - 9

OK Cancel

Tip You can double-click the appropriate value shown on the **Configuration** window to open the editing window.

- 3 Edit the desired **Change Dates** and **Demand Limits**.

If you want to change the controller's demand limit monthly to optimize your savings, set all twelve setting pairs. If changing your demand limit quarterly provides the convenience you desire, simply set four setting pairs. You can also use just one setting pair to annually reset the demand limit to a lower level following the high energy-use season and make manual demand limit adjustments during the rest of the year.

For tips on optimizing your savings, see “Disabling the Auto-Limit Option” later in this section.

For information about how to seasonally change the demand limit, see “Changing the Demand Limit Seasonally” later in this section.

- 4 In the **Number of Days Offset** edit box, enter the number of days that you want the demand limit to be changed before or after when the meter is read.
- 5 After you have finished editing the **Auto-Limit Change Dates** and demand limits, click **OK**.

- 6 After you have finished editing the configuration, choose **Download Configuration** from the **File** menu.

Disabling the Auto-Limit Option

You can easily disable the Auto-Limit option.

➤ To disable the Auto-Limit feature

Set all **Change Dates** to 0/0. The controller ignores any demand limit with an associated Change Date of 0/0, but the demand limits remain in the controller's memory so you can use it later.

Changing the Demand Limit Seasonally

Alternately, the Auto-Limit feature may be used to seasonally adjust the demand limit with no consideration given to the exact meter reading date. The following method offers greater convenience and simplifies the use of the Auto-Limit but does not yield maximum savings.

➤ To change the demand limit seasonally

Set the desired **Change Date** and its associated demand limit. Set the **Number of Days Offset** to 1.

Optimizing Your Savings

To optimize your savings by using the Auto-Limit feature, first review your electric bill or call your local utility to determine the meter reading date. Make sure that this is the date that service for the previous period ends and service for the next period begins, not the billing date (which is usually different).

Your utility can tell you the date that your meter is read; however, weekends, holidays, unexpected delays, or absences can affect the actual date. Each year the **Change Dates** should be reviewed to confirm that your meter has been read on the expected dates.

When you receive your utility bill, make sure that the meter was read during the target period, that is, the target date plus or minus the number of days entered in the **Number of Days Offset** edit box. You should notify your utility that the meter reading date is critical to you and that the meter should be read on the target date plus or minus the number of days entered in the **Number of Days Offset** edit box. Ask them to notify you in advance of any changes that affect the meter reading date.

The **Number of Days Offset** should be set conservatively to make the change as soon as possible but with a high level of confidence that the meter will actually be read within the target period. Five to six days is usually adequate for utilities which read meters on a repeatable basis. Eight or nine days may be necessary for utilities which have a less structured and more irregular meter reading interval. Less than four days of off-set time is usually inadequate because of weekends and holidays which fall on the following Monday. Even if the utility can guarantee the meter reading date, a **Number of Days Offset** of at least 4 should still be used.

If you use the Auto-Limit option, keep in mind that the demand limit will change automatically at the programmed dates this year, next year and each year thereafter. It will change without warning and may not be appropriate or adequate for a future year's conditions although weather is generally the same from year to year. Even though the Auto-Limit feature can make the job of adjusting your demand limit effortless, you need to review the target dates and demand limits periodically (no less than annually) to make sure they are right for you and consistent with your utility's scheduled meter reading dates.

Overriding the Auto-Limit Demand Limit

The current demand limit in effect is shown on the Status window under the **Controller** menu. If you change the controller's demand limit with the **Set Demand Limit** window under the Controller menu or with the **Demand Limit** portion of the **Configuration** window, the "new" demand limit serves only as temporary override. It is in effect only until the next scheduled demand limit change by the Auto-Limit option.

For example, suppose the current date is August 12th. The **Change Dates** you have entered for dates #7 and #8 are July 15th and August 14th, respectively. You are currently in the seventh period and the **Demand Limit (KW)** setting on the **Automatic Demand Limit Changes** window is 7.0 KW. The **Demand Limit (KW)** for date #8 is 8.5 KW. You have decided that 7.0 KW is not enough, so you use the **Set Demand Limit** window under the **Controller** menu to immediately change the controller's demand limit from 7.0 to 7.5 KW. Everything seems to be fine with 7.5 KW. Two days later, August 14th, is the meter reading date and the **Change Date** for date #8. The **Number of Days Offset** setting is 4 days. Therefore, on August 18th, the demand limit changes from 7.5 KW to 8.5 KW, the demand level set in date #8 (August 14th plus 4 days of offset, since the demand limit is increasing.) Next year on July 15th, a demand limit of 7.0 KW will again be implemented.

Editing the Time-of-Day and Dates for On-Peak and Off-Peak periods

You can edit the time of day and dates for two On-Peak and Off-Peak periods for the number of seasons selected (0-4) in the nS setting. These times should match the times specified by your utility. Two seasons, winter and summer have been selected for this example.

The demand limit time-of-day settings look like this on the **Configuration** window:


	Start Date	Time 1		Time 2	
		On Peak	Off Peak	On Peak	Off Peak
Summer	4/1	8:55 AM	10:05 PM	12:00 AM	12:00 AM
Winter	10/1	5:00 AM	1:05 PM	11:55 AM	9:05 PM
Weekends on Peak.....		Yes	Auto Daylight Savings Adjust.....		Yes

➔ To edit the Demand Limit Time-of-Day control

- 1 Make the **Configuration** window active.

To open the **Configuration** window, choose **Upload Configuration** from the **File** or **Controller** menu.

- 2 From the **Edit** menu, choose the **Time-of-Day Control** menu.

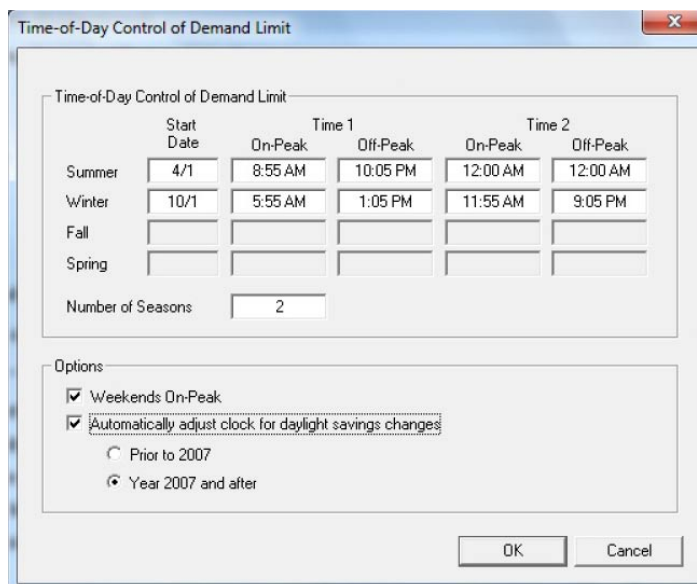

Tip You can double-click the appropriate value shown on the Configuration window to open the editing window.

- 3 Edit the desired dates or times for the On-Peak or Off-Peak Demand Limit.

Note *If you are not using time-of-use demand control, enter 0/0 for all seasonal Start Dates or set the number of seasons to zero (0) and make certain that **Weekends On-Peak** is checked.*

- 4 After you have finished editing the Demand Limit time-of-day controls, click **OK**.
- 5 After you have finished editing the configuration, choose **Download Configuration** from the **File** menu.

Items in the Time-of-Day Control of Demand Limit Window

Time-of-Day Control

Summer Start Date	Enter the date that the summer billing period starts. To disable the summer TOU times, enter 0/0.
Summer Time 1, On-Peak	Enter the first time that the On-Peak period starts each day during the summer.
Summer Time 1, Off-Peak	Enter the first time that the Off-Peak period starts each day during the summer.
Summer Time 2, On-Peak	Enter the second time that the On-Peak period starts each day during the summer.
Summer Time 2, Off-Peak	Enter the second time that the Off-Peak period starts each day during the summer.
Winter Start Date	Enter the date that the winter billing period starts. To disable the winter TOU times, enter 0/0.
Winter Time 1, On-Peak	Enter the first time that the On-Peak period starts each day during the winter.
Winter Time 1, Off-Peak	Enter the first time that the Off-Peak period starts each day during the winter.
Winter Time 2, On-Peak	Enter the second time that the On-Peak period starts each day during the winter.
Winter Time 2, Off-Peak	Enter the second time that the Off-Peak period starts each day during the winter.

If 3 or 4 seasons are selected, the additional settings will show up.

Options

Weekends On-Peak Check Weekends On-Peak if weekend days are considered On-Peak by your utility company. Uncheck Weekends On-Peak if weekend days are considered Off-Peak by your utility company.

Auto Daylight Savings Adjust Check “Automatically adjust clock for daylight savings changes” if your clock changes between standard time and daylight savings time twice a year. Uncheck “Automatically adjust clock for daylight savings changes” if your clock stays on standard time year round. Select either prior to 2007 or year 2007 and after to select the correct Daylight Savings Time (DST) setting. Remember, this must match the meter’s DST change setting.

Editing the Dates for Holidays

Your utility company determines holiday dates, during which your electrical use is billed at the Off-Peak rate. You only need to change these dates once a year. If you are not billed at a time-of-use Demand rate, enter 0/0 for all holiday dates.

The holiday date settings look like this on the Configuration window:

Holidays									
#1	#2	#3	#4	#5	#6	#7	#8	#9	
1/1	7/4	12/25	0/0	OnP	OnP	OnP	OnP	OffP	

The first three holiday dates are automatically set for you.


Note: Some versions of the demand controller may have different settings options.

➔ To edit the dates for Holidays

- 1 Make the **Configuration** window active.

To open the **Configuration** window, choose **Upload Configuration** from the **File** or **Controller** menu.

- 2 Choose the **Holidays** submenu from **Time-of-Day Control** under the **Edit** menu.

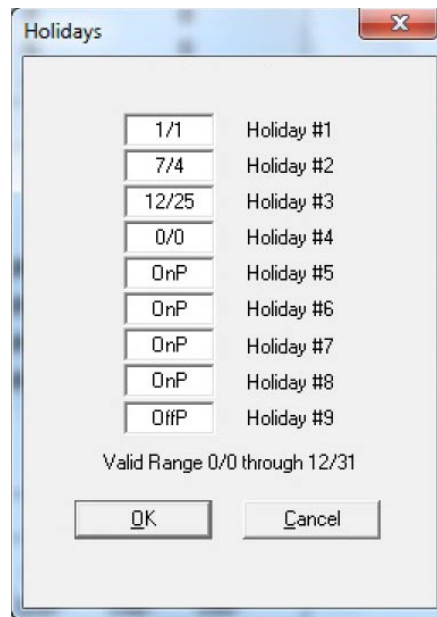

Tip You can double-click the appropriate value shown on the **Configuration** window to open the editing window.

3 Edit the desired dates for holidays.

(Different models of demand controllers and their firmware editions set the holidays differently- refer to your specific demand controller's technical manual.)

Note If you are not using time-of-use demand control, enter 0/0 for all the holiday dates.

4 After you have finished editing the Holidays, click **OK**.

5 After you have finished editing the configuration, choose **Download Configuration** from the **File** menu.

Editing the System Settings

With the exception of the demand controller's name, System Settings should only be adjusted by a qualified installer, unless you understand the function of each setting and the effects of ganging each setting.

The System Settings look like this on the Configuration window:


System Settings			
Number of Loads	8	Demand Averaging Period...	15
Power Measurement	40 KW CT	Demand Control Algorithm ..	1

➤ To change the demand controller's name

- 1 Make the **Configuration** window active.

To open the **Configuration** window, choose **Upload Configuration** from the **File** or **Controller** menu.

- 2 From the Edit menu, choose **System Settings**.

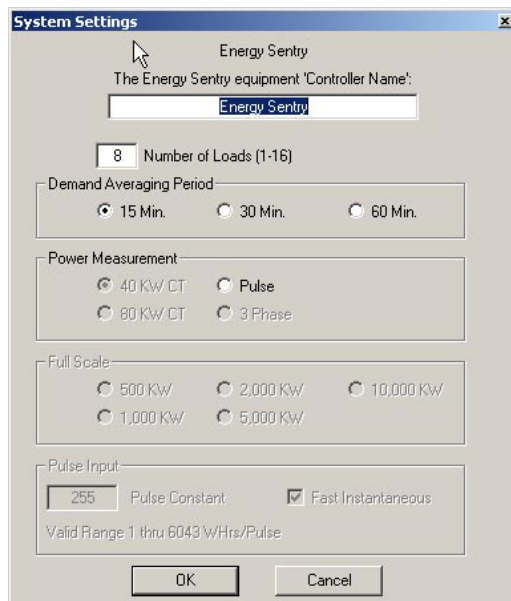

Tip You can double-click the appropriate value shown on the **Configuration** window to open the editing window.

- 3 Edit the demand controller's name.
- 4 Click **OK**.
- 5 After you have finished editing the configuration, choose **Download Configuration** from the **File** menu.

Items in the System Settings Window

Controller's Name Every demand controller should have a unique name, which is kept in the controller as part of its configuration. The controller's name appears at the top of each window and is important when EnergyAccess communicates with multiple demand controllers.

Number of Loads The Number of Loads is set by your installer.

Demand Averaging Period The Demand Averaging Period is set by your installer.

Power Measurement The Power Measurement is set by your installer.

Full Scale The Full Scale is selected by your installer.

Pulse Constant The Pulse Constant is set by your installer.

Editing the Commercial Settings


You can set up loads as normally open relays.

➔ To edit the commercial settings

- 1 Make the **Configuration** window active.

To open the **Configuration** window, choose **Upload Configuration** from the **File** or **Controller** menu.

- 2 From the **Edit** menu, choose **Commercial Settings**.

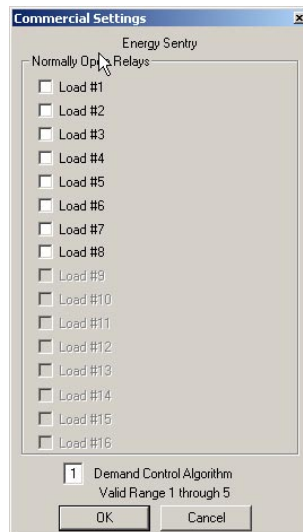

- 3 Check the loads that you want set up as Normally Open Relays.
- 4 After you have finished editing the Commercial Settings, click **OK**.
- 5 After you have finished editing the configuration, choose **Download Configuration** from the **File** menu.

Do not use this setting unless your relaying scheme is designed for normally open relays and your fail-safe state is properly configured.

Editing the Alarms


You can set up EnergyAccess to warn you with an audible or visual alarm when the average demand approaches or exceeds the demand limit.

The alarm settings look like this on the Configuration window:

Exceeding Demand Limit Alarm	Approaching Demand Limit Alarm
Audio Alarm..... Yes	Audio Alarm..... Yes
Window Pop-Up Alarm..... Yes	Window Pop-Up Alarm..... Yes
Sound Alarm When Average at or above limit AND Average is increasing	Sound Alarm When Average is > 80 % of limit AND Average at limit in 5:00

➔ To edit the alarms

- 1 From the **Edit** menu, choose **Alarms**.

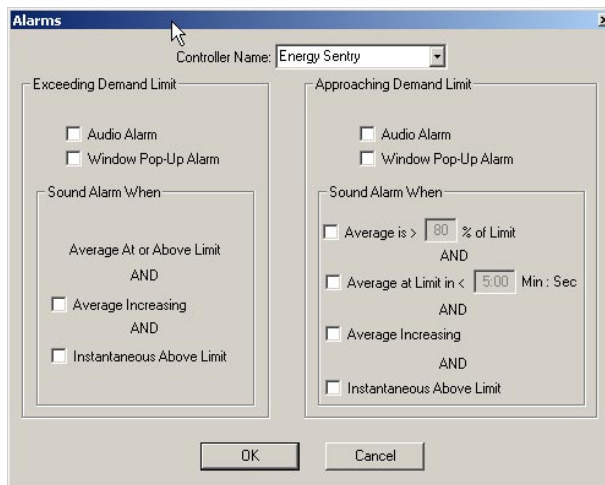

Tip You can double-click the appropriate value shown on the **Configuration** window to open the editing window.

- 2 If necessary, select the demand controller's name from the Controller's Name drop-down list.



- 3 Select or deselect the desired options for the **Exceeding Demand Limit** alarm.
- 4 Select or deselect the desired options for the **Approaching Demand Limit** alarm.
- 5 After you have finished editing the Alarms, click **OK**.

After you have finished editing the Alarms, it is not necessary to download the configuration since this information is stored on your computer's hard disk.

Items in the Edit Alarms Window

Sound Alarm When options determine when the alarm is initiated. Conditions must be met for all checked options before the alarm will engage. For example, suppose that both **Average Increasing** and **Instantaneous Above Limit** are checked for the **Exceeding Demand Limit** alarm. For the alarm to sound, the following conditions must be met:

- The average demand must be equal to or greater than the demand limit
- The average demand must be increasing
- The instantaneous demand must be above the demand limit.

All three conditions must be met. If only one or two conditions are met, the alarm will not pop-up or sound.

Exceeding Demand Limit Options

Audio Alarm	Check Audio Alarm if you want the alarm to sound through your computer's speaker.
Window Pop-Up Alarm	Check Window Pop-Up Alarm if you want the alarm to appear on your monitor.
Average Increasing	Check Average Increasing if you want the alarm to go off when the average demand is increasing.
Instantaneous Above Limit	Check Instantaneous Above Limit if you want the alarm to go off when the instantaneous demand exceeds the demand limit.

Approaching Demand Limit Options

Audio Alarm	Check Audio Alarm if you want the alarm to sound through your computer's speaker.
Window Pop-Up Alarm	Check Window Pop-Up Alarm if you want the alarm to appear on your monitor.
Average Is >	When checked, this alarm condition is met whenever the average demand is greater than a percentage of the demand limit, as entered in the edit box.


- Average at Limit <** When checked, this alarm condition is met whenever the average demand will reach the demand limit in less than the time entered in the edit box. The value used to set off the alarm is displayed in the Demand Countdown Timer portion of the Status bar.
- Average Increasing** Check Average Increasing if you want this alarm condition to be met when the average demand is increasing.
- Instantaneous Above Limit** Check Instantaneous Above Limit if you want this alarm condition to be met when the instantaneous demand exceeds the demand limit.

Editing Load Names

Load names are for your convenience. You probably would find “A/C - Conference Room” easier to remember than associating “Load #5” with the conference room’s air conditioner.

➔ To edit the load names

- 1 From the **Edit** menu choose **Load Names**.

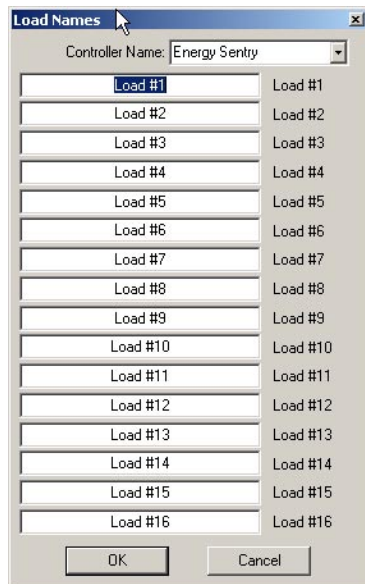

Tip You can double-click the appropriate value shown on the **Configuration** window to open the editing window.

- 2 Select the demand controller for which you want to edit load names.



- 3 Edit the highlighted load name.
- 4 Click **OK** after you have finished editing load names.

After you have finished editing the load names, it is not necessary to download the configuration since this information is stored on your computer's hard disk.

Chapter 6: What's Going On (and Off)?

This chapter explains how to monitor the demand controller's status and set the demand limit and demand controller's clock on-the-fly.

Monitoring the Real-Time Status of the Demand Controller

By monitoring the activity of the demand controller, you can observe the behavior of your electrical usage as it occurs. EnergyAccess alerts you when the average demand approaches the demand limit, allowing you to manually control loads.

➤ To begin monitoring the status of the connected demand controller


Choose **Real-Time Status** from the **Controller** menu.

Note *If communication with the demand controller has not yet been established, a dialog appears asking you to select a communications port. Select the port and click **OK**.*

The following window appears as EnergyAccess attempts to establish communication with the demand controller:



After a few moments, the Status window for the connected demand controller appears:

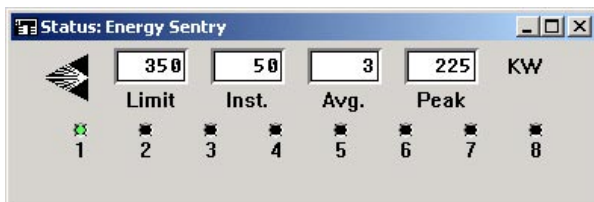

Note *A green light or "On" indicates that power has been made available (restored) to the load. This does not necessarily mean that the load has been turned on.*

Viewing Options

You can view the status of controlled loads in four ways:

- Load names with on/off indicator lights
- Load numbers with on/off indicator lights
- Load names with on/off text
- Load numbers with on/off text


Tip You can double-click a load name to open the **Load Names** editing window.

In addition, you can select from the following viewing styles:

- Vertical Style
- Standard Style
- Horizontal Style

The currently selected viewing options are indicated by a check mark in the View menu.


Here's what the **Status** window looks like with both **Standard Style** and **Name with Lights** checked in the **View** menu:

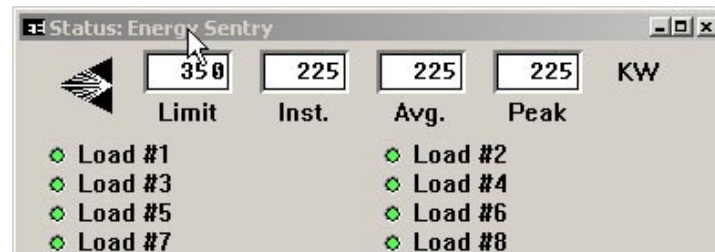

Here's what the **Status** window looks like with both **Horizontal Style** and **Numbers with On/Off** checked in the **View** menu:



Here's what the **Status** window looks like with both **Vertical Style** and **Numbers** with **Lights** checked in the **View** menu:

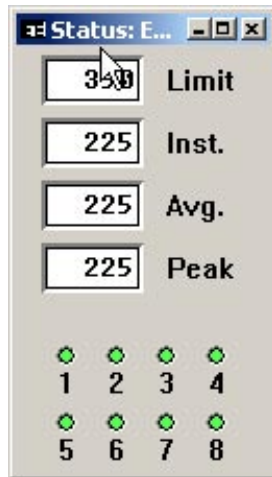

As you can see, you've got a many combinations to choose from.

➤ To select a viewing option

Choose the desired viewing option from the **View** menu while the **Status** window is active.

Items in the Status Window

Limit The value shown is the currently active Demand Limit, in KW, as set in the demand controller.

Tip You can double-click the Limit value to open the Set Demand Limit window.

During the Off-Peak period, the Off-Peak demand limit is shown. During the On-Peak period, the On-Peak demand limit is shown.

To change the Demand Limit, see the following section, "Setting the Demand Controller's Demand Limit" on page 52.

Inst. The value shown is the Instantaneous Demand, in KW, as monitored by the demand controller.

Avg. The value shown is the Average Demand, in KW, as calculated by the controller.

Peak The value shown is the Peak Demand, in KW, as monitored by the controller.

Tip You can reset the peak demand by double-clicking the **Peak** value shown on the **Status** window.

Load Status Indicators A green light or “On” indicates that power has been made available (restored) to the load. This does not necessarily mean that the load has been turned on.

Printing the Demand Controller’s Status


You can print the demand controller’s Status window and status bar information.

➔ To print the Status window

1 Make the demand controller **Status** window active.

To open the **Status** window, choose **Real-Time Status** from the **Controller** menu.

2 From the **File** menu, choose **Print**.

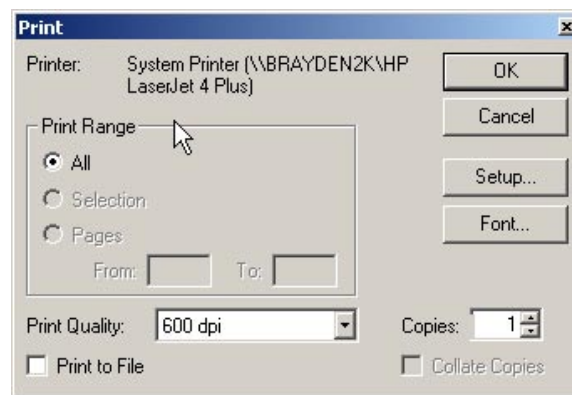

3 Select the desired printing options.

The available print options depend on the selected printer driver.

4 Click **OK**.

Reviewing Demand Controller Events

You can view or print a history of critical demand controller events, which includes the following information:

- Time and date when the current Peak Demand was set

- The time when the previous Peak Demand was reset
- The value of the Peak Demand when it was reset
- The times when the demand controller was turned off or on

➤ **To review demand controller events**

From the **Controller** menu, choose **Events**.

➤ **To print the history of demand controller events**

- 1 Make the **Events** window active.

To open the **Events** window, choose **Events** from the **Controller** menu.

- 2 From the **File** menu, choose **Print**.
- 3 Select the appropriate printing options.

The available print options depend on the selected printer driver.

- 4 Click **OK**.

Setting the Demand Controller's Demand Limit

The demand limit is the set point, expressed in KW, below which energy is being consumed at an efficient rate. As this limit is approached, the Energy Sentry controller begins shutting off pre-determined loads to control energy demand.

You can set the demand controller's demand limit in the following ways:

- Upload the demand controller's configuration. Edit the demand limit. Then, download the configuration, with the new demand limit, to the demand controller.
- Open a configuration file that has been saved to disk. Edit the demand limit. Download the configuration with the new demand limit to the demand controller. Finally, save the configuration with the new demand limit to your hard drive.
- Use the **Set Demand Limit** command under the **Controller** menu to change the demand controller's demand limit "on-the-fly."

Which method you should use depends on whether or not you save configuration files to disk. Although using the **Set Demand Limit** command is quicker than downloading a configuration, a configuration file saved to disk will not be updated to the new value set in the demand controller.


Tip You can have EnergyAccess automatically change the On-Peak demand limit on a monthly, quarterly, or seasonal basis. For details, see “The Demand Limits They are a Changin’” on page 33.

If you prefer to save configuration files to disk, you should probably use the second method to ensure that your configuration on disk is always in up-to-date with the demand controller.

➔ **To immediately change the controller’s Demand Limit**

1 From the **Controller** menu, choose **Set Demand Limit**.

Note The valid range for the demand limit is determined by the **Full Scale** option selected on **System Settings** portion of the **Configuration** window.

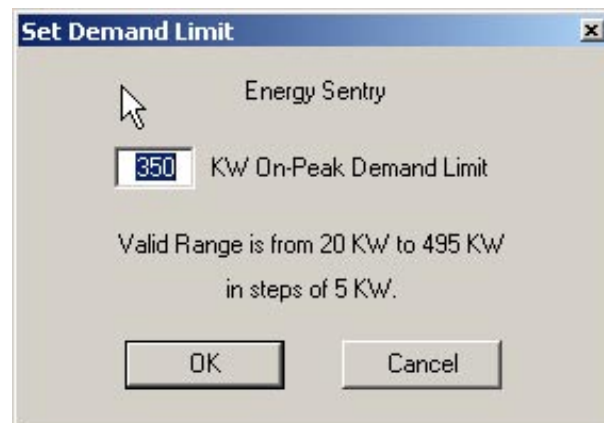

Tip If the **Status** window is open, you can also open the **Set Demand Limit** window by double-clicking the value shown for **Limit**.

2 Change the demand limit in the edit box.

3 Click **OK**.

The following message appears as the new demand limit is downloaded to the demand controller:

Downloading the Demand Limit Data


Setting the Demand Controller's Clock

You can use the **Set Clock** window to adjust the demand controller's clock.

Note *Since the demand controller's clock is more accurate than the clock in your computer, you will probably only need to edit the controller's clock if its time has been inadvertently altered.*

➔ To set the demand controller's clock

- 1 From the **Controller** menu, choose **Set Clock**.

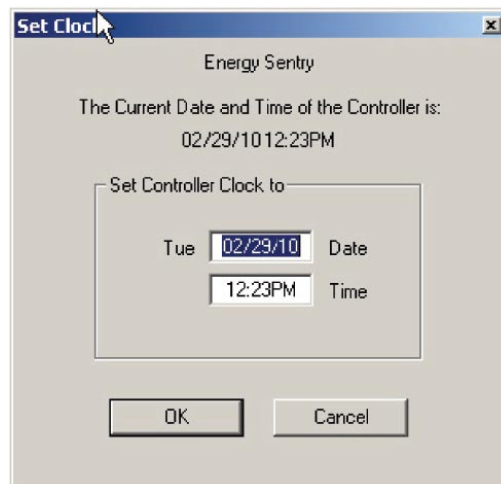

- 2 If necessary, change the time and date in the appropriate edit boxes.
- 3 Click **OK**.

Items in the Set Clock Window

Time The demand controller will be set to the time shown in this edit box when you click OK. The edit box is initialized with the demand controller's time. If you change the time, be sure to enter am or pm in the edit box.


Date The demand controller will be set to the date shown in this edit box when you click OK. The edit box is initialized with the demand controller's date. The day displayed to the left of the edit box is automatically determined by the date.

Resetting the Demand Controller's Peak Demand

Your electric meter's peak demand is reset to the current average demand once a month by your utility company. To match the peak demand set in the Energy Sentry demand controller or monitor to your energy bill, you should reset your peak demand to the current average demand right after your electric meter is read.

➤ To reset the demand controller's peak demand

- 1 From the **Controller** menu, choose **Reset Peak**.

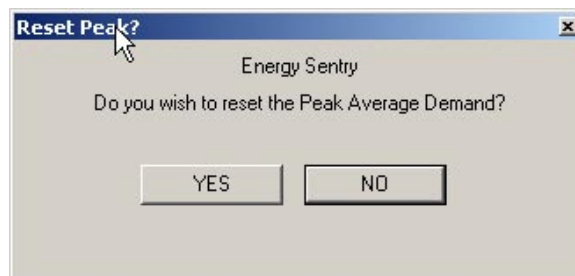

Tip *If the demand controller's **Status** window is active, you can open the **Reset Peak** dialog by double-clicking the **Peak** value.*

- 2 Click **Yes**.

Chapter 7: Logging the Demand Controller Data

This chapter shows you how to log demand controller data as it monitors your electrical use. You can do the following with a Log file:


- View the data collected in the Log file.
- Graph the data in the Log file at any time, including as it is collected.

Creating a Log File

You can use the **Record Data to Log File** command to store the demand controller data to disk as it is being collected by the demand controller or monitor.

➔ To create a new Log file

- 1 From the **Logging** menu, choose **Record Data to Log File**.

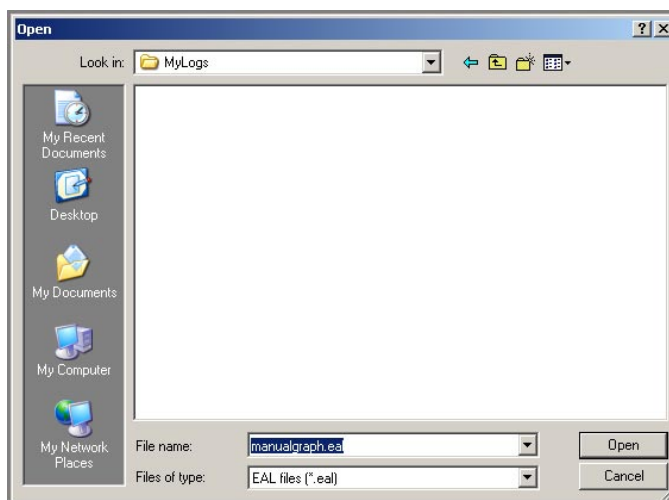

- 2 Choose in which directory to save the log file.
- 3 In the File Name edit box, type a name for the Log file.

The extension “.eal” is automatically appended to the file name after you click **OK**.

Note *EnergyAccess uses the .eal file extension for Version 2.0 and beyond. This change was made because of the existence of other commercially available software that used the .log extension. If you have stored log files from Version 1.x, you can still graph them using the current version of 2.x software. Do not try to append any new data to a .log file using Version 2.x.*

4 Click **OK**.


EnergyAccess asks you if you want to create a new file.



After you press Yes, EnergyAccess will ask you “Would you like to begin a new file every night at Midnight?” This is a handy function in EnergyAccess called “Auto Logging”.

Auto Logging allows you to log energy use data by daily 24 hour segments. This feature creates a library of load profiles for you to print out at a later date, but standardizes the time intervals of the graphs to 24 hours for easy comparison of one day to the next. If this feature is enabled, EnergyAccess will stop the current file at midnight and start a new file with a new filename. If the function is not selected, EnergyAccess simply will record data until it is told to stop, using the filename selected by the user.


To use the Auto Logging feature, the user selects the filename prefix that can contain up to 12 letters or alpha characters.

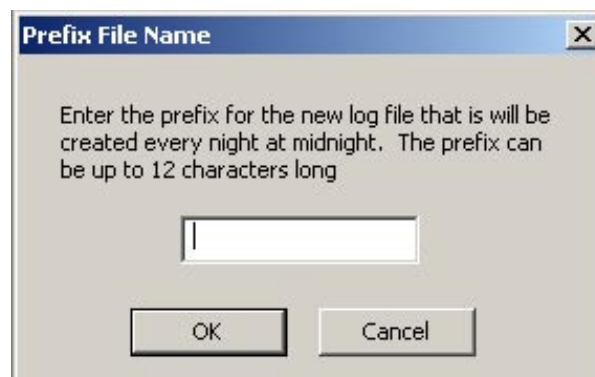

Following the user-selected letters, EnergyAccess will enter that coded date as follows: YYYY_MM_DD. When a new file is created automatically at midnight, the filename prefix stays the same and only the date code changes corresponding with the current date.

New files are automatically created in the same file folder that the old file was located in.

5 Click **OK**.

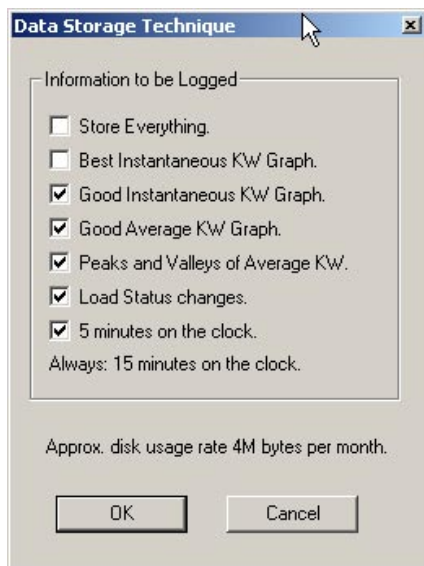

6 Select the appropriate Data Storage Technique.

For details, see the following section.

7 Click **OK**.

The Logging Status portion of the status bar at the bottom of the EnergyAccess window indicates the filename to which current system data is being written.




Choosing the Appropriate Data Storage Technique

You need to select a data storage technique whenever you log controller data to a Log file. EnergyAccess uses the selected data storage technique to determine how much demand controller data to save to your hard disk.

Storing more data consumes more hard drive space. EnergyAccess could store every piece of information that it reads from the demand controller or monitor, but huge Log files (more than 20 MB per month) would be the result. To reduce the size of the Log file, EnergyAccess does not store the center data point of three adjacent and identical data points.

You too can do your part to reduce hard drive storage waste by carefully choosing the data storage technique for your Log files. The following discussion gives you the details to help you store the data you want while keeping the Log file size to a minimum.

When you select a Data Storage Technique, the other storage techniques below it are automatically checked. For example, checking the **Good Instantaneous KW Graph** automatically checks the **Good Average KW Graph, Peaks and Valleys of Average KW, Load Status Changes, and 5 Minutes on the Clock** options:

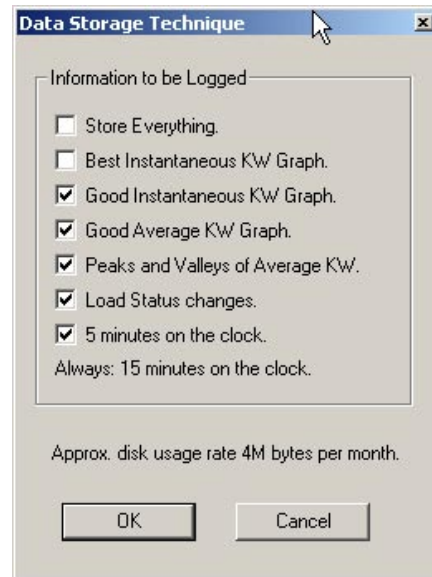

Notice that **15 Minutes on the Clock** is always selected meaning the Average Power is stored in 15 minute intervals. For example, Average Power will be stored at 10:00 a.m., 10:15 a.m., 10:30 a.m., and so on. The Instantaneous Demand is not stored.

As you can see, each checked option includes all the options below it. The following table shows you what data is stored when each option is checked.

			Average Demand & Demand Limit Changes		Load Status	Average Demand		Instantaneous Demand		All Data
Data Storage Technique	Approx. Disk Usage per Mo.	Store Instant. Demand?	Every 15 min.	Every 5 min.	Changes	Changes >2% of Demand Limit	More Data	Changes >5% of Demand Limit	Changes >2% of Demand Limit	• every sec • any changes
Store Everything	24 MB	yes	•	•	•	•	•	•	•	•
Best Instantaneous KW Graph	12 MB	yes	•	•	•	•	•	•	•	
Good Instantaneous KW Graph	6 MB	yes	•	•	•	•	•	•		
Good Average KW Graph	3 MB	no	•	•	•	•	•			
Peaks and Valleys of Average KW	1.5 KB	no	•	•	•	•				
Load Status Changes	750 KB	no	•	•	•					
5 Minutes on the Clock Average	180 KB	no	•	•						
Always: 15 minutes of the Clock Average	60 KB	no	•							

5 Minutes on the Clock	5 Minutes on the Clock stores the Average Power every 5 and 15 minutes on the clock. For example, Average Power will be stored at 10:00 a.m., 10:05 a.m., 10:10 a.m., and so on. It will also be stored at 10:00 a.m., 10:15 a.m., 10:30 a.m., and so on. The Instantaneous Demand is not stored.
Load Status Changes	In addition to storing the Average Power every 5 and 15 minutes on the clock, Load Status Changes stores the status of each load whenever a load status changes. The Instantaneous Demand is not stored.
Peaks and Valleys of Average KW	In addition to storing the current Average Power every 5 and 15 minutes on the clock and load status changes, Peaks and Valleys of Average KW records the highs and lows of the Average Power data. Fluctuations of less than 2 percent of the Demand Limit are ignored. The Instantaneous Demand is not stored.
Good Average KW Graph	In addition to storing the current Average Peaks and Valleys, Good Average KW Graph records more Average Power data to provide a good graph of the shape of the Average Power usage. The Instantaneous Demand is not stored.
Good Instantaneous KW Graph	In addition to storing more Average Power data, Good Instantaneous KW Graph also records fluctuations of Instantaneous Power data of greater than 5 percent of the Demand Limit. Good Instantaneous KW Graph stores the minimal amount of Instantaneous Demand data.
Best Instantaneous KW Graph	In addition to storing the current Average Power every 5 and 15 minutes on the clock, load status changes, and more Average Power data, Best Instantaneous KW Graph stores records fluctuations of Instantaneous Power data of greater than 2 percent of the Demand Limit.
Store Everything	Store Everything records every data point received from the demand controller, except the middle data point of 3 identical and consecutive data points.

Gaps in the Log Data

There are various conditions that can occur which will cause data to be unavailable for logging:

- **Other programs** - Multiple programs running on your computer under Windows can consume all of the available computer time and prevent EnergyAccess from collecting and storing data every second.
- **Computer intensive functions** - Certain EnergyAccess functions, such as printing and graphing, require all of the computer's time. During these times, data may not be collected every second. You can minimize data loss by graphing the amount of data for the time period of interest. For example, you could avoid graphing an entire month's of data if all you are interested in is one week.
- **COM port intensive functions** - Some of EnergyAccess's functions, such as "Time-til-Limit" computations, uploads, downloads, and Controller Events data collection, require the use of the COM port to get information from the controller. During these activities, data will not be collected every second.
- **COM port data transmission errors** - If the COM port receives a bad piece of data over the RS-232 cable connected between the demand controller and your computer, EnergyAccess restarts the data collection sequence for that one second of data. This may result in the loss of that one second of data.
- **Menus and Dialog boxes** - When you are using a dialog box or have a menu pulled down, Microsoft Windows requires most of the computer time. To minimize data loss during data collection, you should avoid leaving pull down menus or dialog boxes open for long periods of time.

Any of the the described events can cause EnergyAccess to miss recording data points in a log file. As a result, the Controller Events information (some of which is kept by the demand controller) may not exactly match the log information. For example, if the Peak Average only lasted for 2 or 3 seconds, and another program happened to be printing during that time, the peak in the Events window may be higher than the peak in the log file for that time.

Normal use of the computer under Windows results in only sporadic data losses, which are usually unnoticeable.


However, if you want to record as many data points as possible, set up Windows with no other applications running, and use EnergyAccess to only log data during the time period of interest. When you need extremely detailed data, run EnergyAccess with no windows open and in iconized (minimized) form.

Adding Data to an Existing Log File


You can add data to the end of an existing Log file.

➔ To add data to an existing Log file

- 1 From the **Logging** menu, choose **Record Data to Log File**.

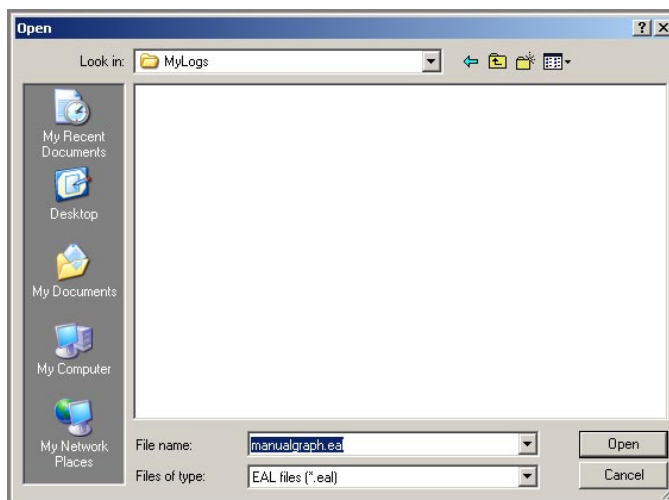

- 2 From the list of Log files, choose the Log file that you want to add data to.
- 3 Click **OK**.

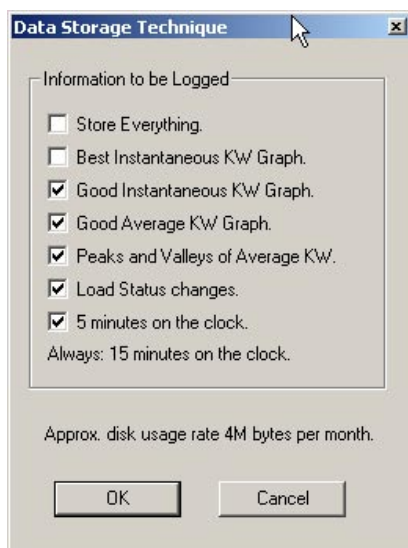

- 4 Select the appropriate Data Storage Technique.

For details, see “Choosing the Appropriate Data Storage Technique” on page 58.

- 5 Click **OK**.

Stopping the Logging Process

You can stop logging the controller data to a file. Exiting EnergyAccess, of course, automatically stops the logging process.

➔ To stop logging

From the **Logging** menu, uncheck the **Record Data to Log File** option. The Logging Status portion of the status bar at the bottom of the EnergyAccess window indicates that logging has been turned off.



Viewing a Log File


Viewing a Log file allows you to take a look closer look at the data collected by the demand controller in a table format.

Date/Time	Limit	Inst.	Avg.	Loads
02/25/10 5:26:12PM	350	225	42	11100000
02/25/10 5:26:23PM	350	61	44	11100000
02/25/10 5:26:24PM	350	218	44	11100000
02/25/10 5:26:28PM	350	174	44	11100000
02/25/10 5:26:30PM	350	181	45	11100000
02/25/10 5:26:31PM	350	225	45	11100000
02/25/10 5:26:32PM	350	169	45	11100000
02/25/10 5:26:33PM	350	225	45	11100000
02/25/10 5:26:35PM	350	220	46	11100000
02/25/10 5:26:37PM	350	225	46	11110000
02/25/10 5:26:39PM	350	225	47	11110000
02/25/10 5:26:43PM	350	225	48	11110000
02/25/10 5:26:46PM	350	225	49	11110000
02/25/10 5:26:50PM	350	225	50	11110000
02/25/10 5:26:54PM	350	225	51	11110000
02/25/10 5:26:57PM	350	225	52	11110000
02/25/10 5:27:02PM	350	225	52	11110000
02/25/10 5:27:06PM	350	225	54	11110000
02/25/10 5:27:10PM	350	225	55	11110000
02/25/10 5:27:14PM	350	225	56	11110000
02/25/10 5:27:18PM	350	225	57	11110000
02/25/10 5:27:22PM	350	225	58	11110000
02/25/10 5:27:26PM	350	225	59	11110000
02/25/10 5:27:30PM	350	225	60	11110000
02/25/10 5:27:34PM	350	225	61	11110000
02/25/10 5:27:36PM	350	225	61	11111000
02/25/10 5:27:37PM	350	225	62	11111000
02/25/10 5:27:41PM	350	225	63	11111000

You can scroll the Log file to see more data. You can even view a Log file while the data is being collected by the demand controller. New data will be added to the end of the file. You can also print the Log file.

➔ To view a Log file

1 From the **File** menu, choose **Open Log File**.

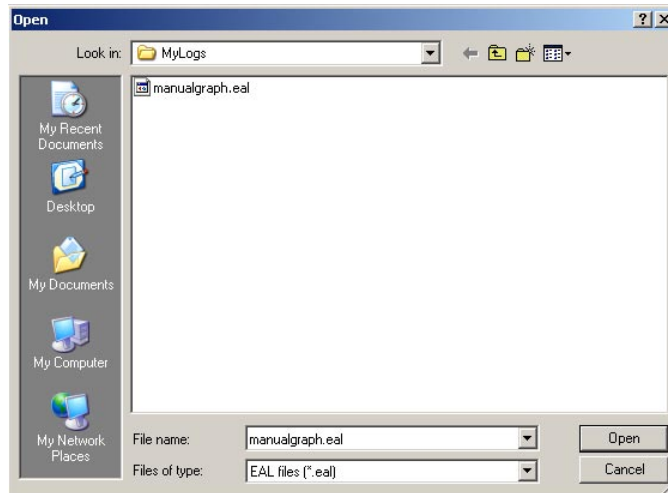


- 2 From the File Name list, select the Log file you want to view.
- 3 Click **OK**.

Printing a Log File


You can print any Log file that you can view on your screen.

➔ To print a Log file

- 1 From the **File** menu, choose **Open Log File**.

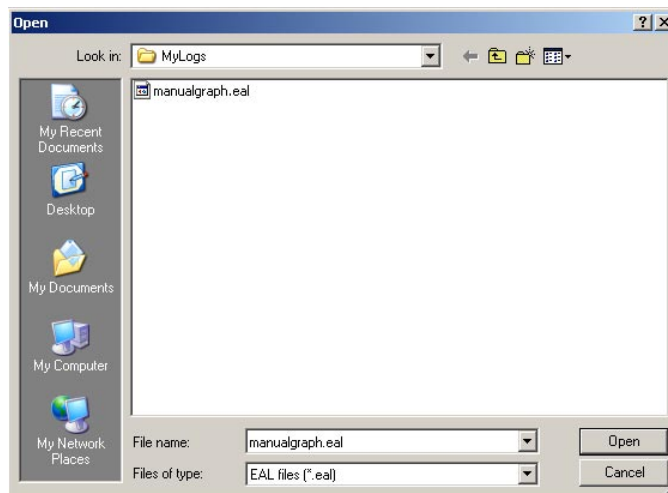

- 2 From the File Name list, select the Log file you want to print.
- 3 From the **File** menu, choose **Print**.

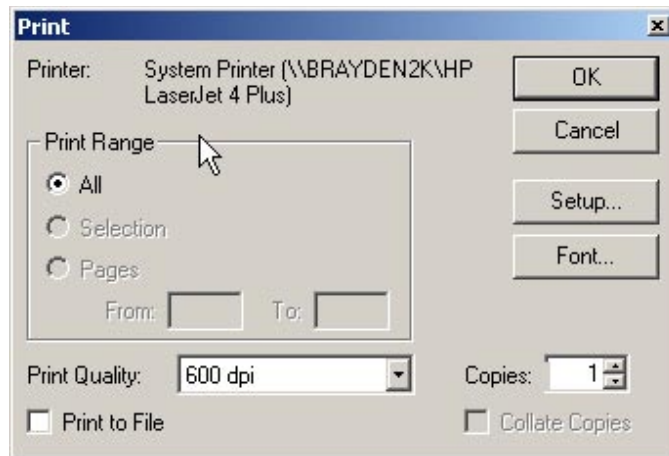

- 4 Select the desired printing options.

The available print options depend on the selected printer driver.

- 5 Click **OK**.

Exporting a Log File

An Energy Access .eal file may be exported as a .csv file for use with Excel or other programs.

➤ To Export .eal file

- 1 Under File select option Export Log File
- 2 Follow instructions that appear
- 3 Open the file you want to download
- 4 Save file as a Comma Separated Value File .csv

Chapter 8: Graphing

Graphing the data collected from the controller gives you a convenient visual representation of the activity of your electrical use. With a graph, you can do the following:


- Graph the data as it is collected.
- Graph a previously stored Log file.

Graphing a Real-Time Load Profile

You can graph data as it is being collected by the demand controller or monitor.

➔ To graph a real-time load profile

- 1 From the **Graph** menu, choose **Real Time Graph**.

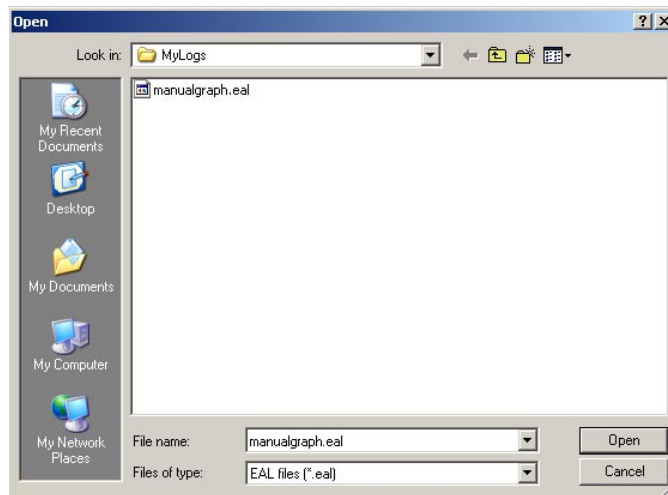

- 2 Choose the subdirectory to save the Log file in.
- 3 Give the Log file a new name.

The extension “.eal” is automatically added to the file name.

Note *If you choose an existing Log File, the new data collected by the demand controller will be appended to the existing Log file. If you do want to append on an existing file, be sure to choose an existing file recorded on the same day. Otherwise, start a new file.*

- 4 Click **OK**.


EnergyAccess asks you if you want to create a new file.



After you press Yes, EnergyAccess will ask you “Would you like to begin a new file every night at Midnight?” This is a handy function in EnergyAccess called “Auto Logging”.

Auto Logging helps you to log energy use data by daily 24 hour segments. This feature creates a library of load profiles for you to print out at a later date, but standardizes the time intervals of the graphs to 24 hours for easy comparison of one day to the next. If this feature is enabled, EnergyAccess will stop the current file at midnight and start a new file with a new filename. If the function is not selected, EnergyAccess simply will record data until it is told to stop, using the filename selected by the user.


To use the Auto Logging feature, the user selects the filename prefix that can contain up to 12 letters or alpha characters.

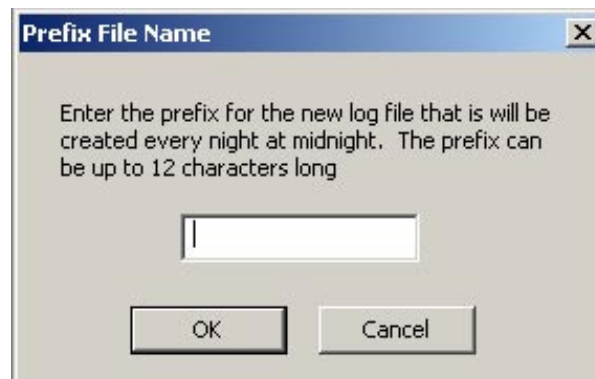

Following the user-selected letters, EnergyAccess will enter that coded date as follows: YYYY_MM_DD. When a new file is created automatically at midnight, the filename prefix stays the same and only the date code changes corresponding with the current date.

New files are automatically created in the same file folder that the old file was located in.

5 Click **OK**.

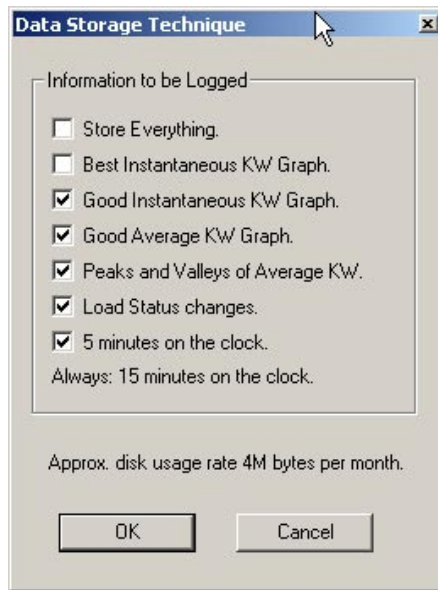


6 Select the appropriate Data Storage Technique.


For details, see “Choosing the Appropriate Data Storage Technique” on page 58.

7 Click **OK**.


Sometimes you might have to wait a few moments for the graph window to appear. EnergyAccess must collect at least 3 unique data points for the window to open. The more static the power use is, the longer it will take for the window to open.

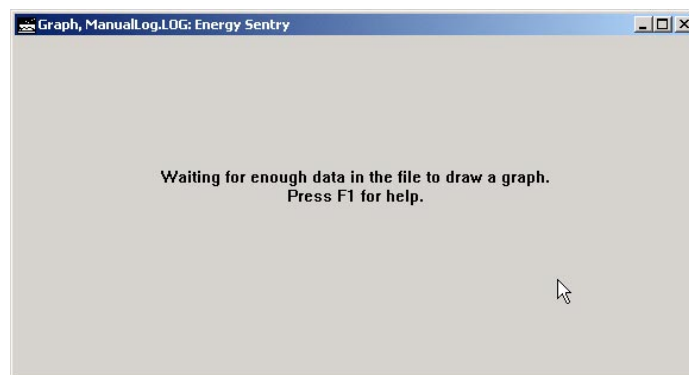

You can expand the Graph window to its full size by following the steps in “Resizing the Windows” on page 5.

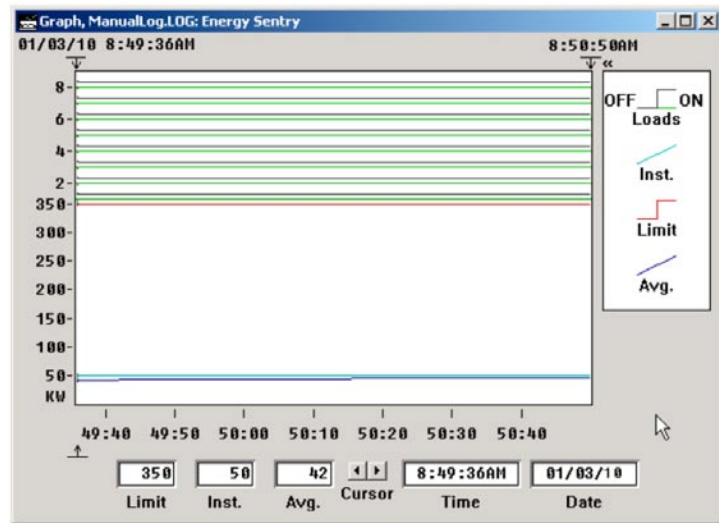

The real-time graphing indicator (<<) appears just to the right of the upper right corner of the graph:

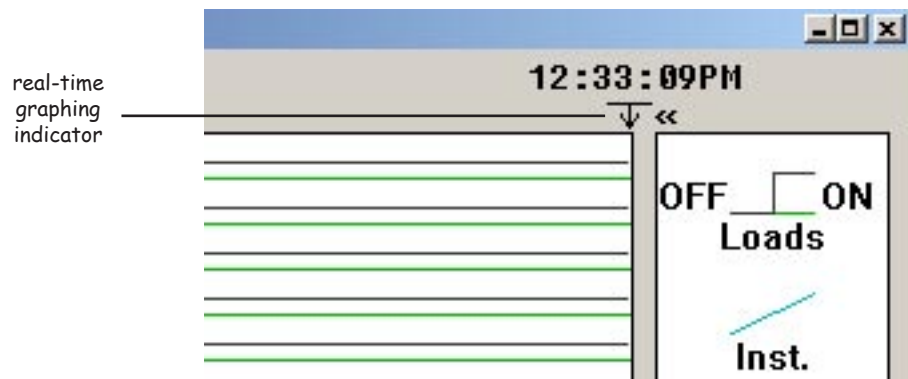

The << symbol indicates the following:


- The file is collecting data from the controller.
- The new data will be plotted on the display as it is collected.

Graphing an Existing Log File

You can graph any existing Log file.

➔ To graph a Log file

- 1 From the Graph menu, choose Log File.

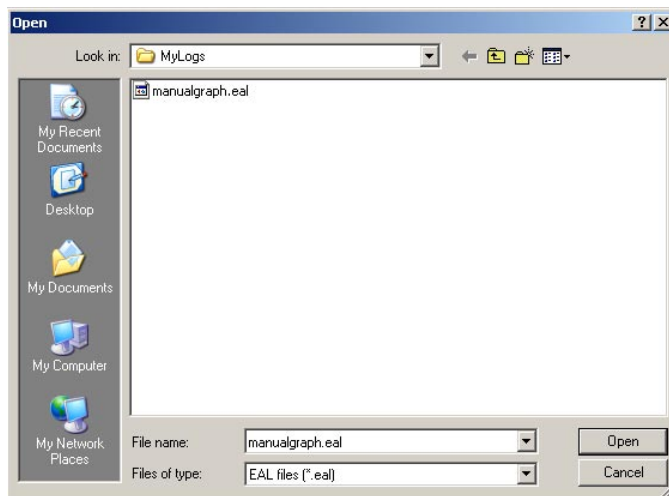

- 2 Select the existing Log file from the list.
- 3 Click **OK**.

Note *EnergyAccess will graph log files which have been previously stored that have either .log or .eal filenames.*

What Is On the Graph?

Depending on which Data Storage Technique you choose, a graph can show you a wide variety of information about your electrical usage:

- Instantaneous demand (blue-green line)
- Average demand (blue line)
- Demand limit (red line)
- Load status (black and green lines across the top of the graph)

Energy Access 2.3 automatically graphs the entire file, turns off the instantaneous graph line, and automatically runs the “find peak” utility. This is because this is the most common method of viewing previously logged log files. To turn the instantaneous data back on, pull down the view menu and select instantaneous.

Understanding the Graph


You can use the Graph window in conjunction with the status bar to anticipate when the Energy Sentry demand controller will begin shutting off loads to control the average demand.


If you are simply using the Energy Sentry system to monitor electrical usage, you can use real-time graphing and the status bar to determine when you should manually shed loads.

Using the Graph Window's Controls

The **Graph** window offers you many options for viewing the data collected from the controller.

Positioning the Graph Cursor

The graph cursor is a vertical line of dots with which you select data points on the graph. The graph cursor has a symbol  under the graph's time scale showing the location of the data point.

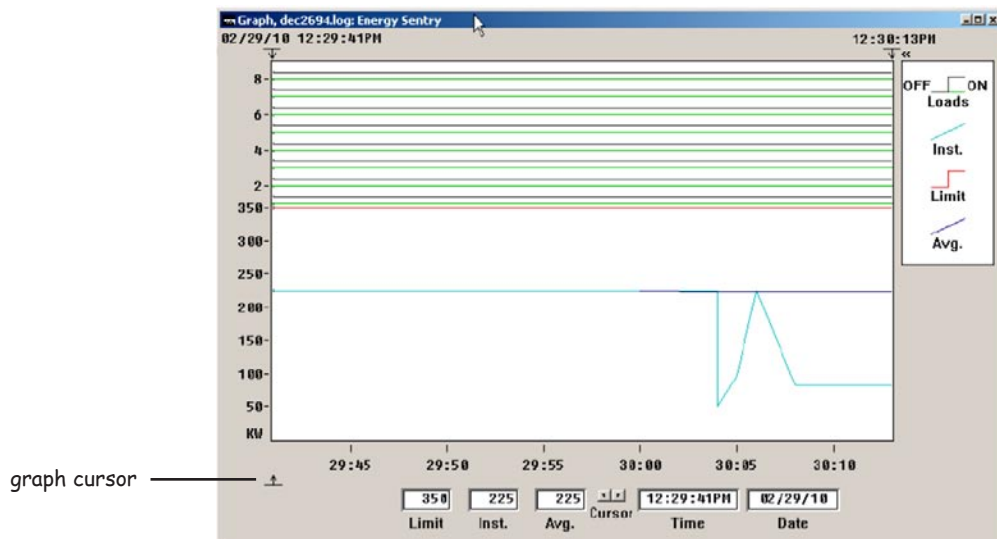

The display below the graph shows you the exact values of the data points selected by the graph cursor.

Positioning the Graph Cursor with the Mouse

You can use your mouse in a variety of ways to position the graph cursor:

- Click either mouse button while the mouse pointer is on any part of the graph to move the graph cursor to the desired position. The mouse

pointer changes to crosshairs when over the graph:



- By clicking the left or right cursor arrow button, you can move the graph cursor one set of data points to the left or right.



Positioning the Graph Cursor with Your Keyboard

You can use the following keys on your keyboard to move the graph cursor:

Keystroke	Result
Left arrow key	Moves the graph cursor one data point to the left.
Right arrow key	Moves the graph cursor one data point to the right.
End key	Moves the graph cursor to the extreme right.
Home key	Moves the graph cursor to the extreme left.
Any Function key except F1	Displays the time portion of the graph set in the Before End-of-File window under the View menu.

Zooming In and Out around Data Points

You can use various mouse and keyboard techniques to zoom in and out around specific data points on a graph.

Zooming In and Out with the Mouse

You can use your mouse to zoom in or out around a set of data points on the graph.

☞ To zoom in with the mouse


- 1 Place the crosshairs over the data points you want to zoom in around
- 2 Double-click the left mouse button.

or


- 1 Position the crosshairs over the left boundary of the data points you want to zoom in around.
- 2 Hold the left mouse button down and drag to the right across the

desired graph area.

The desired area should be enclosed by a rectangle:

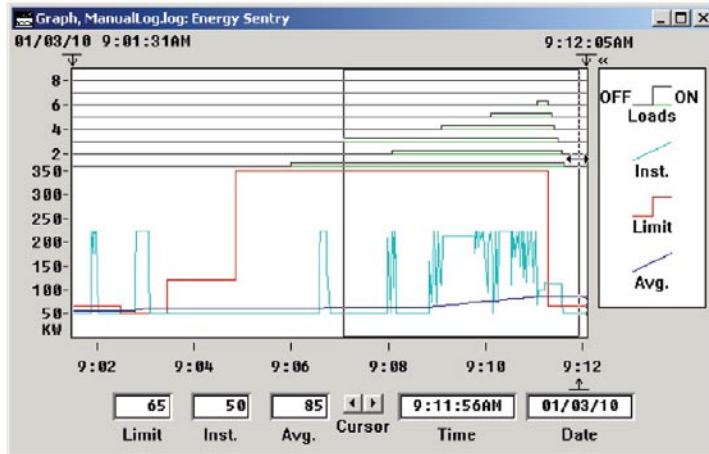

3 Release the left mouse button.

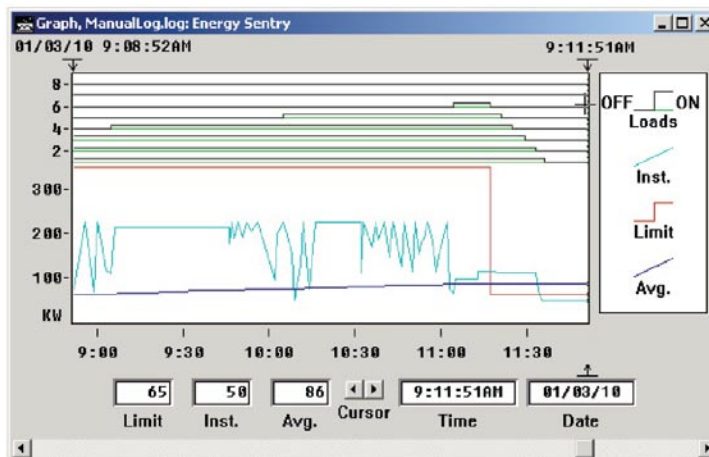

Zooming In and Out with the Keyboard

You can use the following keys on your keyboard to zoom in and out around specific data points on a graph.

Keystroke

Up arrow key

Down arrow key

Result

Zooms in around graph cursor

Zooms out around graph cursor

Special Function Keys

EnergyAccess has three special function keys that are related to viewing data on the graphing window.

F2

Function Key F2 is dual purpose and works only when graphing in real-time mode. The first push of the F2 key zooms out to the last view prior to zooming in. The second pulse zooms all the way out to the time extents of the file. Two pushes of the F2 key will display the entire file while it is being graphed real-time. Some computers have trouble keeping up with writing so much data to the screen and still recording new data so this display mode is not recommended to be used any more than necessary.

F3


Function Key F3 works only in the real-time graphing mode and returns the graph to the time period selected in the “Time before end of file”. For example, if you were to zoom in on a time period of 5 minutes using the cursor, then decided to hit F3, the graph would Zoom Out and return to the 1 hour wide time period if 60 minutes was selected in the “Time Before End of File” box. Conversely, if you had a macro view displayed of several hours, a push of the F3 key again would return your graph’s display to 60 minutes or whatever the Time Before End of file. In this case, F3 acts as a Zoom In key.

F4

Function Key F4 works only for a previously graphed log file. Pushing F4 zooms your view out to the start and stop extents of the logged file. This allows you to quickly “reset” the view back to the default view which is displayed when a previously logged log file is graphed.

Using the Graph Window’s Scroll Bar

Whenever only a part of the graph is displayed in the Graph window, the bottom of the Graph window displays a scroll bar:

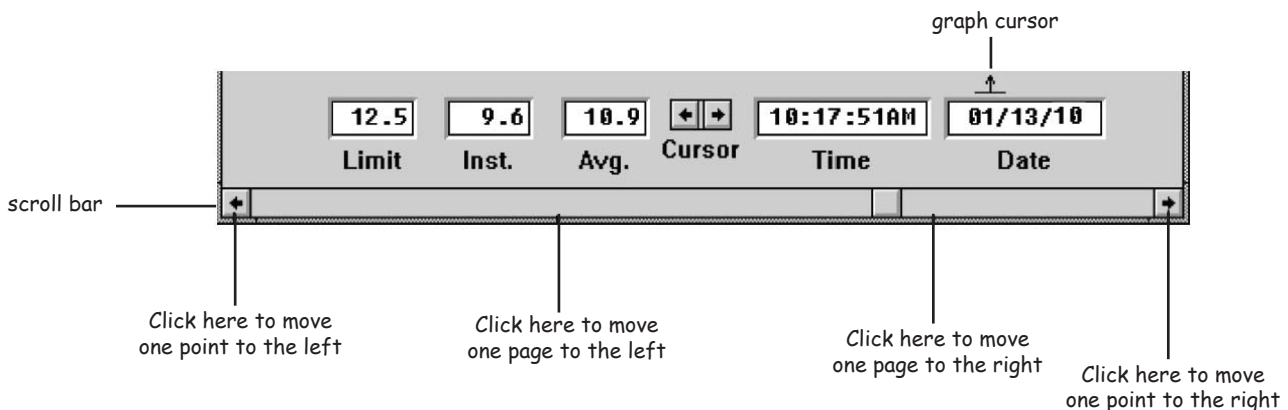

By clicking the left or right scroll arrow buttons on the scroll bar, you can display other parts of the graph. You can also drag the scroll box or slider left or right to view other parts of the graph.


“View” Menu Options

While the Graph window is active, the View menu on the menu bar is available.


Zoom In Select Zoom In to zoom in around the graph cursor. You can also double-click the left mouse button or press the up arrow on your keyboard to zoom in around the graph cursor.

Zoom Out Select Zoom Out to zoom out around the graph cursor. You can also double-click the right mouse button or press the down arrow on your keyboard to zoom out around the graph cursor.

Time Range Selecting Time Range from the View menu opens a window that allows you to specify a start and end date and time for the graph. This is useful for viewing a specific time period. For example, you could specify just one day out of a seven days of data in the Log file.

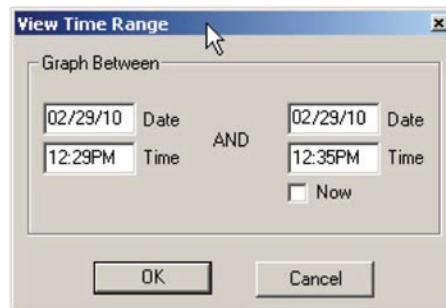

Before End-of-File Selecting Before End-of-File from the View menu opens a window that allows you to specify the last time period to view on the graph. This is useful for real-time graphing because it allows you to constantly view a desired portion of the graph while new data is added to the graph. For example, entering 1:00 would allow you to always view the last hour of data even though the data file could contain a week’s worth of data.

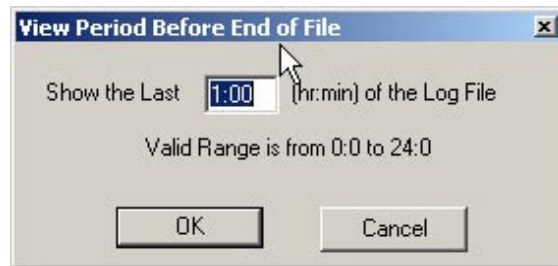

Find Peak EnergyAccess allows you to automatically find the peak data point in a logged .eal file. This eliminates the process of manually scrolling through the file to find the peak data point in the file. When you run the Find Peak feature, it will automatically move the cursor to the peak data point, or if there are data points with the same peak, it will stop on the first instance of the highest KW peak. When you open a previously-logged graph file, the Find Peak runs automatically. If you have zoomed in on a particular area of a file, you can run the Find Peak at any time by highlighting the Graphed file, pulling down the View menu and selecting Find Peak.

Demand Limit While checked, the demand limit is graphed.

Average Demand While checked, the average demand is graphed.

Instantaneous While checked, the instantaneous demand is graphed.

Load Status While checked, the on/off status of each controlled load is graphed.

Cursor While checked, the graph cursor, a vertical dotted line, is displayed on the graph.

The detail data for the graph cursor is displayed at the bottom of the graph window:

12.5	9.6	10.9	+	+	11:24:33AM	01/13/10
Limit	Inst.	Avg.	Cursor		Time	Date

X-Axis While checked, the time axis is displayed along the bottom portion of the graph.

Y-Axis While checked, the power (KW) axis is vertically displayed along the left portion of the graph.

Legend While checked, the legend or key to the graph is displayed on the right hand side of the graph.

Printing a Graph

You can print any graph that you can view. EnergyAccess prints only the portion of the graph that is visible in the **Graph** window. You should select the desired options under the **View** menu before you print the graph. Only those items that are checked under the View menu will be printed. Unchecked items under the View menu do not print. The default print format is landscape.

➤ To print a graph

1 Make the **Graph** window active.


2 Select the desired **View** menu options.

For details about the **View** menu options, see “View” Menu Options” on page 75.

3 Display the portion of the graph that you wish to print.

For details, see “Using the Graph Window’s Controls” on page 71.

4 From the **File** menu, choose **Print**.

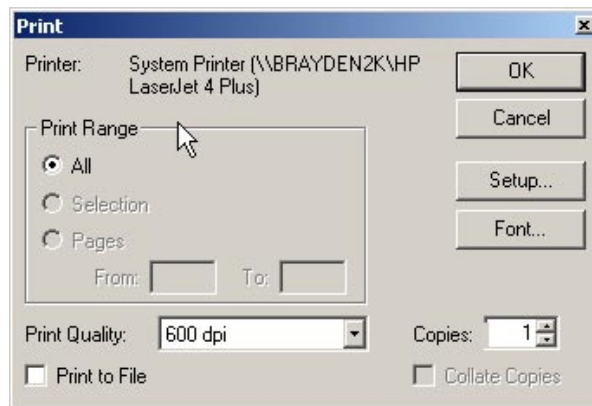

5 To change or select desired printing options, select “Setup Here” or “Print Setup” in the file menu.

The available print options depend on the selected printer driver.

Click **OK**.

➤ Print to PDF

- 1** Make sure your computer has Adobe Acrobat or some other .pdf maker installed.
- 2** Select print from the File menu.
- 3** Select Adobe Acrobat as the printer.
- 4** Press the Ok button.
- 5** Acrobat's file save menu will appear. Insert the desired name and destination folder.

Glossary of Terms

Active Window	The window that is currently selected. An active window's title bar changes color to differentiate it from other windows.
Average Energy Cost	Total energy costs divided by kilowatt-hours (KWh).
Average Demand	The average rate of electric usage during the demand averaging period. The average demand is calculated by dividing the total number of kilowatt-hours used by the number of hours in the averaging period. For example, if 45 KWh's were used during an averaging period of 15 minutes, the average demand would equal 45 divided by .25 (15 minutes) or 180 KW.
Averaging Period	An interval of 15, 30, or 60 minutes during which the average demand is calculated. The demand controller should be set to the same value as the averaging period of the utility's demand meter.
Com Port Status	Part of the status bar that indicates the which of your PC's serial communications ports is being used by the demand controller, the controller's model number, and the controller's firmware version number.
Configuration	A configuration file is used to set up the Energy Sentry demand controller and software. It contains system settings, holidays, demand limit time of day control, and load control information, such as load names, the priority and minimum on and off times for each load.
Controlled Load	An energy consuming device or devices whose electrical supply is temporarily shut off by a load management system. Also see Control Point.
Controller Status	An information window within the EnergyAccess software that shows, in kilowatts, the present Demand Limit, Instantaneous Demand, Average Demand, and Peak Demand and on/off status of loads that are connected to the EnergyAccess Demand Controller.
Controller	Load management hardware.
Control Point	Each control point represents one or more energy consuming devices whose electrical supply can be temporarily shut off by a load management system. Also see Controlled Load.

Customer Charge	A flat charge on an energy bill used to help the utility company recover fixed costs associated with serving a customer. It is independent of the demand or consumption of the energy provided. Also called monthly service charge or basic charge.
Customer Classes	A way of classifying customers according to similar characteristics, such as level of demand, usage, location, and load pattern. These characteristics are classified together for setting electric rates. Customer classes include residential, commercial, industrial, and agricultural.
Demand	The rate of use of electricity during a certain period of time. Demand is measured in kilowatts.
Demand Charge	A charge that recovers some of a utility's capital and operating costs. It appears on an electric bill, along with the customer charge and the energy charge.
Demand Controller	A device that monitors electrical usage and temporarily sheds (turns off) one or more energy consuming devices as necessary to level out energy consumed within any demand interval.
Demand Countdown Timer	Part of the status bar that indicates the number of minutes and seconds until the average demand reaches the demand limit.
Demand Limit	The set point, expressed in KW, below which energy is being consumed at an efficient rate. As this limit is approached, the Energy Sentry controller begins shutting off pre-determined loads to control energy demand.
Demand Meter	A utility meter which measures both total energy consumed in KWh and the highest average demand in KW.
Demand Peak	The highest average KW demand over the billing period. Averages may be determined over 15, 30, or 60 minute intervals depending on the utility. Same as Peak Demand.
Demand Ratchet	A method that typically determines the minimum demand charge on an electric bill for the next 12 months based on the maximum demand of the previous 12 months.
Demand Rate	A method of charging for electric service based on the cost of electricity used on both total energy consumed (KWh) and demand peak (KW).
Energy Charge	A charge that recovers a utility's operating costs. It appears on an electric bill, along with the customer charge and the demand charge.

Energy Rate	A method of charging for electric service used by utilities where the cost of electricity is based only on KWh consumption multiplied by a fixed cost per KWh. Also called “Flat” rate.
Firmware	Computer instructions stored in read-only memory (ROM) on the demand controller rather than in the EnergyAccess software program.
Flat Rate	See Energy Rate.
Holidays	Days that are considered off-peak in time-of-use electric rates.
Instantaneous Demand	The electricity, in kilowatts, currently being drawn by the electrical service of a building at any instant in time.
Kilowatt (KW)	1,000 watts. A measure of an electric load’s size or how much power it demands.
Kilowatt-Hour (KWh)	The basic measurement of electricity consumption. Ten 100 watt lights burning for one hour would consume one kilowatt hour of electrical energy.
Load	The amount of electricity used by a particular energy consuming device or group of devices. Usually expressed in watts or kilowatts.
Load Diversity	The natural or regular on/off cycle of all loads in a building.
Load Factor	The ratio of actual kilowatt-hours used to the amount that would have been used had the energy been consumed uniformly at the maximum rate of demand.
Load Management	The control of demand by temporarily shutting off pre-defined electrical loads.
Load Management Hardware	Equipment, such as the Energy Sentry Demand Controller, used to temporarily shut off energy consuming devices during peak periods.
Load Profile	A numerical or graphical representation of energy use over a certain time period.
Load Status	Indicates whether a controlled load is off or on.
Logging Status	Part of the status bar that indicates whether the demand controller’s data is being logged to disk or not .

Megawatt (MW)	1,000,000 watts or 1,000 kilowatts.
Meter	A device that measures levels of electricity use.
Maximize	To expand a window to its maximum size. You can maximize a window by selecting the Maximize command on a window's Control menu or clicking the Maximize button on the right side of the window's title bar.
Maximize Button	Located at the right side of a window's title bar, the Maximize button is the graphical equivalent of the Maximize command on the Control menu. Clicking the Maximize button expands a window to its maximum size.
Minimize	To reduce a window to an icon or graphical representation. You can minimize a window by selecting the Minimize command on a window's Control menu or clicking the Minimize button on the right side of the window's title bar.
Minimize Button	Located at the right side of a window's title bar, the Minimize button is the graphical equivalent of the Minimize command on the Control menu. Clicking the Minimize button reduces a window to an icon.
Minimum Off Time	The minimum time that a control point must be shut off before it can be restored by the demand controller. Minimum Off Time can be set from 0 to 20 minutes. Control Points having a heat pump or air conditioner compressor or other motor load connected to it should have a Minimum Off Time defined as at least 4 minutes. Resistive loads should not have Minimum Off Times.
Minimum On Time	The minimum time that a control point must be restored before it can be shed by the demand controller. Minimum On Time can be set from 0 to 20 minutes. Control Points having a heat pump or air conditioner compressor or other motor load connected to it should have a Minimum On Time defined as at least 5 minutes.
Monitor	A device that monitors electrical usage
Off-Peak Demand	Highest average demand reached during the off-peak period as defined by a time-of-use rate.
Off-Peak Demand Limit	The point, expressed in KW, below which energy is being consumed at an efficient rate during the off-peak period. As this limit is approached, the Energy Sentry demand controller begins shutting off pre-determined loads to control energy demand during the off-peak period.

Off-Peak Time-of-Day	The period as defined by a time-of-use (TOU) electric rate during which energy demand is the lowest and the utility is well below its system peak. See also Time-of-Use Demand Rate .
On-Peak Demand	The highest average demand reached during the on-peak period as defined by a time-of-use rate.
On-Peak Demand Limit	see Demand Limit.
On-Peak Time-of-Day	The period as defined by a time-of-use (TOU) electric rate during which energy demand is the greatest and the utility is at or near its system peak. See also Time-of-Use Demand Rate .
Peak Demand	The highest demand that has occurred during any one averaging period during the billing period. This is used by utility companies to figure how fast energy is used.
Peak Load	The greatest amount of electricity consumed over a stated period of time.
Peak Period	The averaging period during which the highest peak demand occurs.
Power Bar	Part of the status bar that indicates the risk of the average demand exceeding the demand limit.
Present Demand Limit	The demand limit that is currently in effect.
Priority	The relative importance of each controlled load to all other controlled loads, as assigned in the Demand Controller. As the demand approaches the Demand Limit, the Demand Controller uses the priority of each load to determine which loads to shut off first. A load with a priority of “1” is the highest priority and is shed last and restored first. A load with a priority of “16” is the lowest priority and is shed first and restored last. Loads of equal priority will rotate being shed and restored.
Rate Structure	The format for utility pricing of electric customers.
Restore	To make power available to a load.
Shed	To turn a load off.
Status	see Controller Status or Load Status.

Status Bar	A horizontal bar at the bottom of the Energy Access window that displays the Power Bar, the Demand Countdown Timer, the Logging Status, Com Port Status, and the Controller's model and firmware version number.
Time-of-Use (TOU) Demand Rate	A method of billing which charges a higher price for electricity used in On-Peak periods and a lower price for electricity used in the Off-Peak periods. In addition, the Peak Demand is monitored and recorded separately during in the On-Peak and Off-Peak periods. Often, the off-peak demand, in excess of the on-peak demand, is billed at a small incremental charge or not at all. The cost of electricity is based on both total energy consumed (KWh) and demand peak (KW). Depending on the particular utility and rate, one or more On-Peak periods, varying in length, may exist during a 24 hour period.
Uncontrolled Load	A load which is not connected to or controlled by the demand controller but is measured as part of the building's total demand.
Watt	A measure of electrical power or rate of doing work. It is similar to horsepower where one horsepower is equal to 746 watts.

Appendix A

Connecting your Energy Sentry Demand Controller or Demand Monitor to your Computer using a RS-232 serial port


The Energy Sentry Demand Controller or Demand Monitor contains an RS-232 interface to communicate with your computer. Your computer must be equipped with an RS-232 interface (serial port or com port) having a 9 pin sub-D Male connector.

The Sub-D 9 pin connector on your computer connects to the 6 foot RS-232 cable. Insert the 9-pin end of the cable into your computer's serial port. The opposite end of the interface cable has a DB-25 connector. Connect this connector to the RS-232C adapter, Model FG9109D, supplied with the EnergyAccess software.

Finally, using the 18" phone-type flat cable which contains an RJ-11 phone jack at each end, connect the RS-232C interface adapter to the Energy Sentry Demand Controller or Monitor. This 18" phone cable is a non-standard configuration and cannot be replaced by any standard phone cable.

DO NOT substitute a standard phone extension cord as the unit will be damaged. If you need to extend the length of the cable between the computer and the controller or monitor, the cable must be extended between the computer and the FG9109D RS-232 interface. The model FG9109D interface must be located at the demand controller or monitor for proper noise immunity. The cable may be extended up to 50' to meet the EIA standard for RS-232C communications. However, several hundred feet are possible with good quality shielded communication cable. Contact Brayden Automation for FG9110A/ FG9111A cable extension kit. The RS-232C communication cable's shield should be connected to the power system ground on one end only. It is recommended that since ground is readily available at the Energy Sentry Demand Controller, the communication cable's shield can be connected to ground at that point. This is advisable since the overwhelming majority of the noise that the communication cable will see will be coming from the building's electrical system. Therefore, the shield should shunt the noise to the shortest distance to ground, which in most cases will be the ground at the demand controller.

See drawing on following page to refer to cable connections.

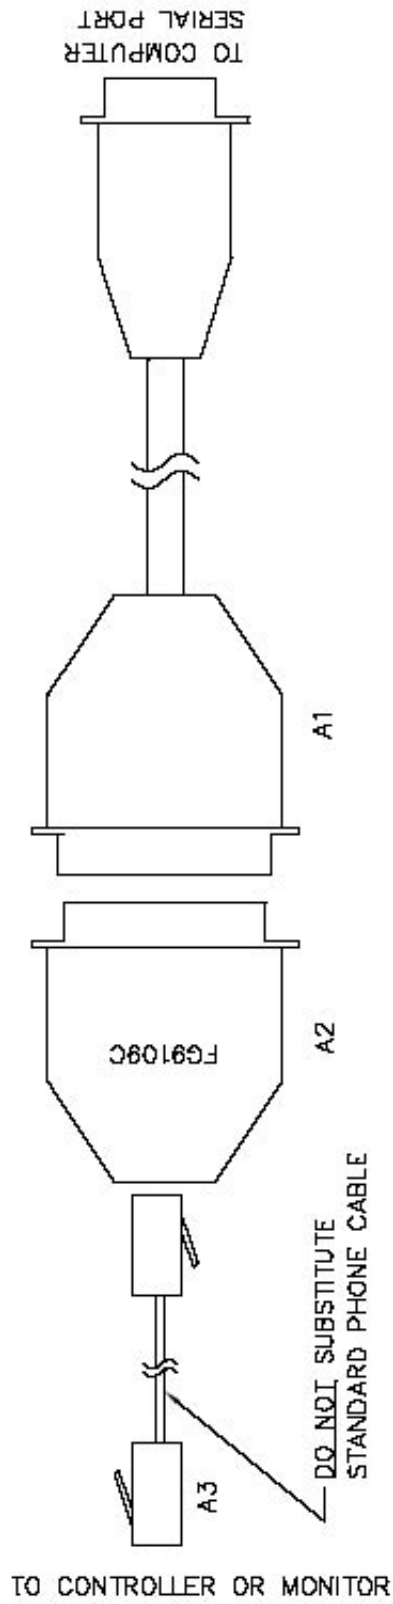

PARTS IDENTIFICATION

REF	BAC P/N	QTY	DESCRIPTION
A1	0715-0001	1	CABLE, RS-232C INTERFACE DB-9F TO DB-25M
A2	FG9109C-00001	1	RS-232 INTERFACE ADAPTER
A3	09109-65003C	1	CABLE, PHONE 4 COND RJ-11

Index

Symbols

<< real time graphing indicator 69

Numerics

15 Minutes on the Clock 59, 60

5 Minutes on the Clock 59, 60

A

About EnergyAccess 15

Active window 10, 76

Alarms

Approaching Demand Limit options
44, 45

editing 19

editing the 43–45

Exceeding Demand Limit options 44

Sound Alarm When option for 45

where stored 26

Approaching Demand Limit options for
Alarms 44

Audio Alarm 45

Auto Daylight Savings Adjust option 40

Auto-Limit option

and changing the demand limit
seasonally 36

disabling the 36

editing the Change Dates and demand
limits 37, 38

optimizing your savings with the 36

overriding the demand limit 37

using the 32–35

Average at Limit 46

Average demand 76
and alarms 45

and Average at Limit 46

and Average Increasing alarm option 45

and Average is > alarm option 45

and demand controller Status window 50

and Demand Countdown Timer 8

and KW Demand Limit 28

and load priorities 29

and minimum on/off times 31, 32

and Power Bar 8

and Sound Alarm When options 45

graphing of 70

Average energy cost 76

Average Increasing 45

Average Is > 45

Averaging period 79

see also Demand Averaging Period setting

Avg. 50

B

Before End-of-File 79

Best Instantaneous KW Graph 60

Brayden Automation Corporation 3, 4, 11,
14

C

Caution message 8

Change Dates for the demand limit 34

Clock

computer's 54

controller's 54

Com Port Status 8, 19, 20
and Status Bar 7, 79

Com?: 8

COM1: ???V?? 9, 20

Commercial Settings 43

- Communications port
 - and Com Port Status 8
 - using multiple 22
 - data transmission errors 61
 - intensive functions 61
 - selecting 19, 20
 - Configuration 25
 - editing a 23–47
 - editing the alarms for a 43–45
 - editing the Auto-Limit Change Dates and Demand Limits 34–36
 - editing the Commercial Settings for a 43
 - editing the holiday dates for a 40–41
 - editing the load names for a 46–47
 - editing the load priorities for a 29–31
 - editing the minimum on/off times for loads 31–33
 - editing the System Settings for a 41–43
 - editing the time-of-day and dates for Off-Peak periods 38
 - editing the time-of-day and dates for On-Peak periods 38
 - modifying a 25
 - printing a 24
 - saving to disk 27
 - setting the demand limits 27
 - Control point 71
 - Controlled load 23, 28, 48, 73, 79
 - Controller 75
 - configuration 23–47 see also Configuration
 - establishing communication with the 19–22
 - logging 56
 - monitoring the real-time status of the 48
 - name 24, 39, 41, 43
 - resetting the peak demand in the 52
 - reviewing history of events 51
 - setting the clock 54
 - setting the demand limit 52
 - Horizontal Style 49
 - Names with Lights 49
 - Names with On/Off 49
 - Standard Style 49
 - Vertical Style 49
 - Controller status 76
 - Controller's clock 54
 - Crosshairs 71, 72
 - Cursor
 - graph 71
 - Customer charge 80
 - Customer classes 80
- D**
- Data storage techniques, choosing 58
 - Daylight Savings 40
 - Demand 80
 - Demand Averaging Period 27, 42
 - Demand charge 80
 - Demand controller 80
 - see also Controller
 - Demand controller's name 42
 - Demand Countdown Timer 8, 9, 80
 - and demand limit 7
 - and Power Bar 8
 - and Status Bar 7, 80
 - Demand limit 76
 - and Power Bar 8
 - and the Energy Sentry Demand Controller 19
 - automatic changes of the 35
 - changing monthly 35
 - changing quarterly 35
 - changing seasonally 36
 - graphing of 70
 - Off-Peak options 28
 - On-Peak options 28
 - overriding the Auto-Limit option 37
- Controller Status
 - viewing

setting the demand controller's 52
 time-of-day control of 38
 Demand meter 80
 Demand monitor, see Controller
 Demand peak 80
 Demand ratchet 80
 Demand rate 13, 80
 Download 25, 30, 32, 38
 Download Configuration 24, 32, 35, 38,
 40, 41, 42
 Downloading the Demand Limit Data
 message 53

E

Energy charge 80
 Energy rate 13, 14, 81
 Energy Sentry
 and Demand rate 14
 and TOU rate 13
 Energy Sentry Demand controller 14
 EnergyAccess
 and Demand rate 15
 and TOU rate 15
 exiting 5
 starting 5
 using windows 5
 version number 11
 Events of the demand controller 52
 Exceeding Demand Limit options for
 Alarms 44
 Exiting EnergyAccess 5

F

F1 key 8, 72
 F2 key 74

F3 key 74
 F4 key 74
 Firmware 7, 81
 Firmware version number 7, 8
 Flat rate, see Energy rate.
 Full Scale 27, 43, 53

G

Good Average KW Graph 59
 Good Instantaneous KW Graph 59
 Graph
 Average demand on a 70
 average demand on a 70, 76
 cursor and keyboard 71
 cursor and mouse 72
 cursor on a 71
 demand limit on a 70, 76
 information on a 68
 instantaneous demand on a 68, 73
 Legend on a 70
 load status on a 70, 76
 Log file 70
 monitoring electrical usage with a 66
 printing a 77
 real-time indicator (>>) on a 69
 real-time load profile 66
 scrolling a 74
 View menu and 49, 75
 window controls on a 71
 X-Axis on a 76
 Y-Axis on a 76
 zooming in and out around data points on
 a 75
 zooming in and out with the keyboard 73
 zooming in and out with the mouse 72

Graph cursor 71

H

Hard drive space, saving 58

Hardware requirements 3

Help 9

 how to get 9

Holiday dates 40

Holidays 81

Horizontal Style 49

I

Inst. 50

Installing EnergyAccess 3

Instantaneous Above Limit 45

Instantaneous demand 8, 81

 and alarms 45

 and data storage techniques 58

 and demand controller Status
 window 50

 graphing of 70, 76

K

Keyboard

 and graph window 72

 and moving between fields 7

Kilowatt 81

Kilowatt-hour 81

L

Legend 76

Limit 52

Load 81

Load diversity 81

Load factor 81

Load management 81

Load management hardware 81

Load names 46

 and on/off lights 49

 and on/off text 49

 editing 46

Load numbers 49

Load priorities 29

Load profile 81

Load status 81

Load Status Changes 60

Loads

 editing priorities 29

 minimum on/off times for 31

 names for 46

 number of 42

 status of 8

Log files

 adding data to existing 62

 and Logging Status 8

 creating 56

 data storage techniques for 58

 gaps in 61

 printing 64

 viewing 63

Logging Status 8, 81

Logging the demand controller data 56

Logging, controller data 56

M

Maximize 82

Maximize button 82

Megawatt 82

Menus and dialog boxes effects on gaps in Log
 files 61

Meter 82

Meter reading 36

Minimize 82

Minimize button 82

Minimum off time 82
Minimum on time 31, 82
Minimum on/off times for loads 31
Modifying a controller's configuration 24
Monitor 45, 48, 82
 see also Controller
Monitoring the real-time status of the demand controller 48
Mouse, and graph window 71
Moving between fields 7

N

Name, controller's 24, 42
Names with Lights 49
Names with On/Off 49
Normally open relays 43
Number of Days Offset option 34
Number of loads 42
Numbers with Lights 49
Numbers with On/Off 49

O

Off-Peak 13
 demand limit for 27
 demand limit options 27
 Summer Time 1 for 39
 Summer Time 2 for 39
 time-of-day and dates 39
 time-of-day controls 39
 Winter Time 1 for 39
 Winter Time 2 for 39
Off-Peak demand limit 82
Off-Peak time-of-day 83
On 28

On-Peak 13
 demand limit 27
 Summer Time 1 39
 Summer Time 2 39
 time-of-day and dates 39
 time-of-day controls 39
 Winter Time 1 for 39
 Winter Time 2 for 39

On-Peak Demand 83
On-Peak demand limit 83
 see Demand limit
On-Peak time-of-day 83
Open Log File 63

P

Peak 50
Peak demand 13, 83
 and demand controller status window 50
 resetting the 55
Peak load 83
Peak period 83
Peaks and Valleys of Average KW 59
Power Bar 8, 83
Power Measurement 27, 43
Power Measurement setting 43
Present demand limit 83
Printing
 a demand controller's configuration 24
 a graph 77
 a Log file 64
 demand controller's status 51
 history of demand controller events 52
Priority 83
Pulse Constant 27, 43

Q

Quitting EnergyAccess 5

R

Rate structure 83

Real-time graphing 66

Real-Time Status 48

Record Data to Log File command 55

Recording data to a Log file 56

Registration number 4

Reset Peak 51

Resetting the peak demand 52

Resizing windows 6

Restore 83

S

Safe message 8

Save Configuration 26

Save Configuration File 26

Save Settings on Exit 5

Saving a configuration to disk 27

Seasonally changing the demand limit 36

Set Clock 54

Set Demand Limit command 52

Shed 83

Software requirements 3

Sound Alarm When options 45

Standard Style 49

Status 83

 demand controller 48

Status bar 7–9, 84

Store Everything 60

Summer Start Date 39

Support. See Technical support

System Settings 41

T

Technical support 9, 11

Time Range 75

Time-of-day control 38

Time-Of-Use Demand rate 13–14

Time-of-Use demand rate 84

TOU demand rate 84

TOU Demand rate, see Time-Of-Use Demand
 rate

U

Uncontrolled load 84

Upload Configuration 20-43

USB Port 22

V

Version number 11

Vertical Style 49

View

 Before End-of-File 75

 Time Range 75

Viewing a Log file 63

W

Waiting for Controller Data message 20

WARNING message 8

Watt 84

Weekends On-Peak 40

Window Pop-Up Alarm 45

Winter Start Date 39

X

X-Axis 76

Y

Y-Axis 76

Z

Zoom In 75

Zoom Out 75

